Register your product and get support at
www.philips.com/welcome

# User manual

PHILIPS

# Contents


**1 Tour 3**
1.1 Smart TV 3
1.2 App gallery 3
1.3 Rental videos 3
1.4 Online TV 3
1.5 Social networks 3
1.6 Skype 4
1.7 Smartphones and tablets 4
1.8 Pause TV and recordings 4
1.9 Gaming 4
1.10 EasyLink 5

**2 Setting up 6**
2.1 Tips on placement 6
2.2 Power cable 6
2.3 Antenna 6
2.4 Network 6
2.5 Connect devices 8
2.6 Setup menu 16
2.7 TV stand and wall mounting 16
2.8 Safety and care 16

**3 TV 18**
3.1 Switch on 18
3.2 Remote control 18
3.3 Watch TV 20
3.4 TV guide 26
3.5 Switch to devices 27
3.6 Subtitles and languages 27
3.7 Timers and clock 28
3.8 Picture settings 29
3.9 Sound settings 30
3.10 Ambilight settings 31
3.11 Universal access 32

**4 3D 34**
4.1 What you need 34
4.2 Your 3D glasses 34
4.3 Watch 3D 34
4.4 Optimal 3D viewing 34
4.5 Health warning 35
4.6 Care of the 3D glasses 35

**5 Smart TV 36**
5.1 Home menu 36
5.2 Smart TV Apps 36
5.3 Videos, photos and music 38
5.4 Pause TV 40
5.5 Recording 41
5.6 MyRemote App 42

**6 Skype 45**
6.1 What is Skype? 45
6.2 Start Skype 45
6.3 Contacts 46
6.4 Calling on Skype 47
6.5 Skype Credit 48
6.6 Skype settings 48
6.7 Sign out 49
6.8 Terms of Use 49

**7 Games 50**
7.1 Play a game 50
7.2 Two-player games 50

**8 TV Specifications 51**
8.1 Environmental 51
8.2 Power 52
8.3 Reception 52
8.4 Display 52
8.5 Sound 52
8.6 Multimedia 53
8.7 Connectivity 53
8.8 Dimensions and weights 53

**9 TV Software 54**
9.1 Software version 54
9.2 Software update 54
9.3 Open source software 54
9.4 Open source license 54

**10 Support 55**
10.1 Register 55
10.2 Using help and search 55
10.3 Online support 55
10.4 Consumer Care 55

**11 Copyrights and licences 56**
11.1 HDMI 56
11.2 Dolby 56
11.3 Skype 56
11.4 DivX 56
11.5 Microsoft 56
11.6 Other trademarks 56

**Index 56**

1

# Tour

## 1.1 Smart TV

Connect this **Philips Smart LED TV** to the Internet and discover a new world of television. You can make a wired connection to your router or you can link up wirelessly with Wi-Fi.

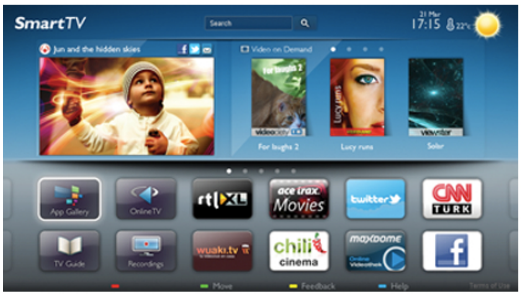


With the TV connected to your home network, a smartphone can show a photo on TV, you can play videos stored on your computer or control the TV with your tablet.

With your TV connected to the Internet, you can watch a rental video from an online video store, read the online TV guide or record your favourite TV show on a USB Hard Drive. The Smart TV Apps add to the fun with all sorts of entertainment and convenient services.

In **Help**, press ☰ **List** and look up **Smart TV** for more information.

## 1.2 App gallery

Open the **App gallery** in Smart TV to browse the Apps, the collection of tailored websites for TV.

Find the App for YouTube videos, a national newspaper, an online photo album, Facebook, Twitter, etc. There are Apps to rent a video from an online video store and Apps for watching programmes you missed. If the App gallery does not hold what you are looking for, try the World Wide Web and surf the Internet on TV.

In **Help**, press ☰ **List** and look up **App gallery** for more information.

## 1.3 Rental videos

To watch a **rental video**, you don't need to leave your home. Simply rent the latest movie from your regional online video store.

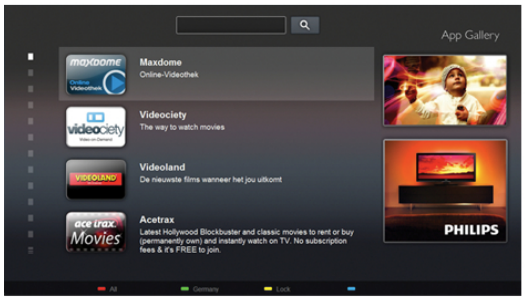


Start Smart TV and add the video store App to the Smart TV start page.
Open the video store App, create your personal account, select the movie and press play.
No fuss with downloading, you can watch the movie immediately*.

In **Help**, press ☰ **List** and look up **Rental videos** for more information.

* Depending on the video streaming service of the selected video store.

## 1.4 Online TV

With the **Online TV** Apps of Smart TV (streaming TV), you can watch a TV programme you just missed or watch a programme when it suits you best.
Look for the broadcaster logo in the App gallery.

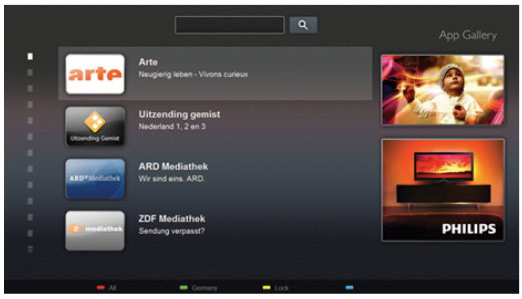


In **Help**, press ☰ **List** and look up **Online TV** for more information.

1.5

# Social networks

No need to get up to check your friend's messages on your computer. Open Smart TV, select your **social network** page and send a message back from your couch.

Smart TV supports the popular social networks Facebook and Twitter.

In **Help**, press ☰ **List** and look up **App gallery** for more information.

1.6

# Skype

With **Skype™** you can make video calls on your TV for free.

You can call and see your friends from anywhere in the world. To make a video call, you need a camera with a built-in microphone and a good connection to the Internet.

In **Help**, press ☰ **List** and look up **Skype** for more information.

1.7

# Smartphones and tablets

To use your smartphone or tablet as a TV remote control or as your media controller, download the **Philips MyRemote** app from your smartphone or tablet app store.

Operate your TV from your smartphone or tablet, switch channels or change the volume. With the MyRemote app, you can use your phone or tablet to send photos, music or videos from your computer to your TV. And with MyRemote app on a tablet, you can call up the TV guide, read about the programmes and switch the TV to a channel with a simple tap of your finger. The MyRemote app is available for iOS and Android.

In **Help**, press ☰ **List** and look up **MyRemote app** for more information.

1.8

# Pause TV and recordings

If you connect a USB Hard Drive, you can **pause and record a broadcast** from a digital TV channel.

Pause your TV and answer that urgent phone call or simply take a break during a sports match, while the TV stores the broadcast on the USB Hard Drive. You can start watching again later.
With a USB Hard Drive connected, you can also record digital broadcasts. You can Record while you are watching a program or schedule a recording of an upcoming programme.

In **Help**, press ☰ **List** and look up **Pause TV** or **Recording** for more information.

1.9

# Gaming

If you select your **game console** in the Home menu, the TV switches to the settings ideal for gaming automatically.

If you play a multi-player game with split screens, you can set the TV to show each screen as a full screen. Each player can focus on his own game to play.

Player 1

Player 2

The TV uses 3D technology to show both screens. To play a two-player game with two different full screen pictures, you need a pair of 3D glasses for each player.

In **Help**, press ☰ **List** and look up **Game console** or **Two-player games** for more information.

1.10

# EasyLink

With **EasyLink** you can operate a connected device, like a Blu-ray Disc player, with the remote control of the TV. EasyLink uses HDMI CEC to communicate with the connected devices.

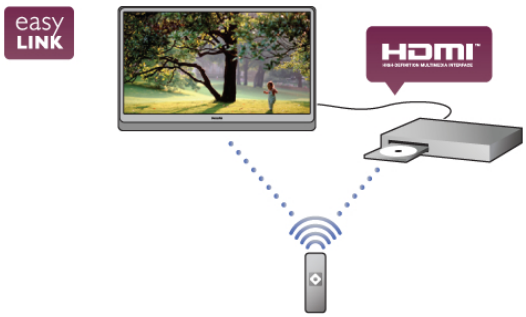


In **Help**, press ☰ **List** and look up **EasyLink** for more information.

2

# Setting up

## 2.1 Tips on placement

## 2.2 Power cable

Insert the power cable into the **POWER** socket of the TV.
Make sure the power cable is securely inserted into the TV.
Make sure that the power plug in the wall socket is accessible at all times.
When disconnecting the power cable, always pull the plug, never the cable.

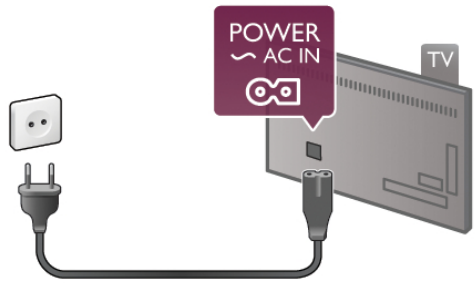


Although this TV has a very low standby power consumption, unplug the power cable to save energy if you do not use the TV for a long period of time.

In **Help**, press ☰ **List** and look up **Standby** for more information on switching the TV on and off.

## 2.3 Antenna

Locate the antenna connection at the back of the TV. Insert the antenna cable securely into the **Antenna** socket.

You can connect your own antenna or connect to an antenna signal from an antenna distribution system (common in certain regions). Use an IEC Coax 75 Ohm RF antenna connector.

Use this antenna connection for DVB-T and DVB-C input signals.

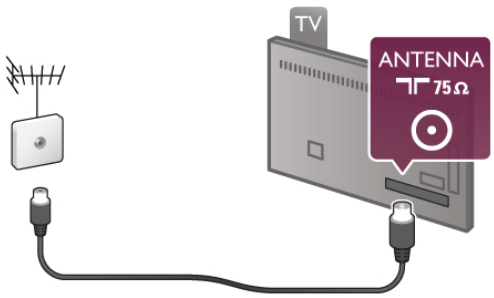


## 2.4 Network

### Wireless connection

**What you need**
To connect the TV wirelessly to the Internet, you need a **wireless router**. Use a high-speed (broadband) connection to the Internet.

**DLNA**
The TV uses the DLNA protocol to find and open files on other devices in your wireless network, like your computer or NAS device. You can use a computer with a Microsoft Windows XP, Vista or Windows 7, Mac OSX or Linux-based operating system.

**Media server software**
With media server software on your computer, you can open your photos, music and videos stored on your computer on your TV screen.
Use a recent version of media server software like Windows Media Player 11, Twonky™ or similar*.
Install the software on your computer and set it up to share your media files with the TV. Read the manual of the media server software for more information.
To open your files on the TV, the media server software must be running on your computer.

* In **Help**, press ☰ **List** and look up **Media server software, supported** for an overview of supported media server software.

**Make the connection**
Follow steps **1** to **5**.

**Step 1 -** Make sure that the router of your wireless network is switched on.
**Step 2 -** Press ⌂ and select ⚙ **Setup** and press **OK**.
**Step 3 -** Select **Connect to network** and press **OK**.
**Step 4 -** Select **Wireless** and press **OK**.
**Step 5 -** Select **Scan** to scan for your wireless network. If you have a router with WPS (Wi-Fi Protected Setup), you can select **WPS**. Select your choice and press **OK**.

- **Scan**
Select **Scan** to scan for your wireless network (your wireless router). The TV might find several wireless networks in your proximity.

- **WPS**

If your router has WPS, you can directly connect to the router without scanning. Go to the router, press the **WPS** button and return to the TV within 2 minutes. Then press **Connect** to make the connection.
If you have devices in your wireless network that use the WEP security encryption system, you cannot use WPS.
If you must use the **WPS pin code** to connect, select **Scan** instead of WPS.

**Step 6 -** In the list of networks found, select your wireless network and press **OK**.
If your network is not in the list because the network name is hidden (you switched off the SSID broadcast of the router), select **Manual entry** to enter the network name yourself.

**Step 7 -** Depending on the type of router, you can now enter your encryption key (WEP, WPA or WPA2). If you entered the encryption key for this network before, you can select **Next** to make the connection immediately.
If your router supports WPS or WPS pin, you can select **WPS**, **WPS pin** or **Standard**. Select your choice and press **OK**.

- **Standard**
Select **Standard** to enter the encryption key (password, passphrase or security key) manually. You can use the keyboard on the RC to enter the encryption key. Once you have entered the key, press **Connect**.

- **WPS pin**
To make a secured WPS connection with a PIN code, select **WPS pin** and press **OK**. Write down the 8-digit PIN code shown and enter it in the router software on your PC. Return to the TV and press **Connect**. Consult the router manual on where to enter the PIN code in the router software.

**Step 8 -** A message will be shown when the connection is successful.

### Network configuration
If the connection fails, you can check the DHCP setting of the router. DHCP should be set to **On**.
Alternatively, if you are an advanced user and want to install your network with static IP addressing, set the TV to Static IP. To set the TV to Static IP, press ⌂ and select ⚙ **Setup** and press **OK**. Select **Network settings** > **Network configuration** > **Static IP**. With Static IP selected in the menu, you can set the IP address and other necessary settings in **Static IP configuration** in the same menu.

### Network problems
**Wireless network not found or distorted**
• Microwave ovens, DECT phones or other Wi-Fi 802.11b/g/n devices in your proximity might disturb the wireless network.
• Make sure that the firewalls in your network allow access to the TV's wireless connection.
• If the wireless network does not work properly in your home, try the wired network installation.

**Internet does not work**
• If the connection to the router is OK, check the router connection to the Internet.

**The PC and Internet connection are slow**
• Look in your wireless router's user manual for information on indoor range, transfer rate and other factors of signal quality.
• Use a high-speed (broadband) Internet connection for your router.

## Wired connection

### What you need
You need a network **router** to connect the TV to the Internet. Use a router with a high-speed (broadband) connection to the Internet.

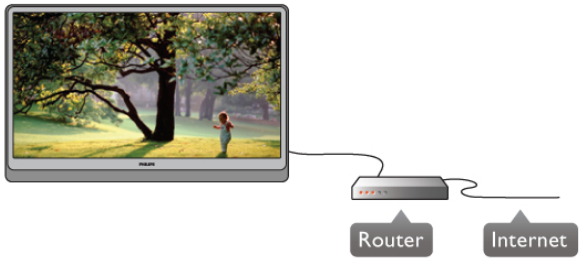


### Installation
Follow steps **1** to **5**.
**1 -** Connect the router to the TV with a network cable (Ethernet cable**).
**2 -** Make sure that the router is switched on.
**3 -** Press ⌂ and select ⚙ **Setup** and press **OK**.
**4 -** Select **Connect to network** and press **OK**.
**5 -** Select **Wired** and press **OK**.
The TV constantly searches for the network connection. A message will be shown when the connection is successful.

### Network configuration
If the connection fails, you can check the DHCP setting of the router. DHCP should be set to On.
Alternatively, if you are an advanced user and want to install your network with static IP addressing, set the TV to Static IP. To set the TV to Static IP, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **Network settings** > **Network configuration** > **Static IP**. With Static IP selected in the menu, you can set the IP address and other necessary settings in **Static IP configuration** in the same menu.

### DLNA
The TV uses the DLNA protocol to find and open files on other devices in your network, like your computer. You can use a computer with a Microsoft Windows XP, Vista or Windows 7, Mac OSX or Linux operating system.

### Media server software
With media server software on your computer, you can open your photos, music and videos stored on your computer on your TV screen.
Use a recent version of media server software like Windows Media Player 11, Twonky™ or similar*.
Install the software on your computer and set it up to share your media files with the TV. Read the manual of the media server software for more information.
To open your files on TV, the media server software must be running on your computer.

* In **Help**, press ☰ **List** and look up **Media server software, supported** for an overview of supported media server software.

**To fulfill EMC regulations, use a shielded FTP Cat. 5E Ethernet cable.

## Network settings

To open the Network settings, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **Network settings** and press **OK**.

**View network settings**
All current network settings are shown here. The IP and MAC address, signal strength, speed, encryption method, etc.

**Network type**
Sets the network to Wired or Wireless.

**Network configuration**
Sets the network configuration to DHCP & Auto IP or Static IP.

**Static IP configuration**
If Static IP is set, you can set all necessary static IP settings here.

**Digital Media Renderer - DMR**
To receive multimedia files from smartphones or tablets, set the DMR to On.

**TV network name**
If you have more than one TV in your network, you can rename the TVs here.

**Clear Internet memory**
With Clear Internet memory you clear all Internet files stored on your TV. You clear your Philips Smart TV registration and parental rating setting, your video store app logins, all Smart TV app favourites, Internet bookmarks and history. Interactive MHEG applications can also save so-called 'cookies', on your TV. These files will also be cleared.

2.5
# Connect devices

## Tips on connections

**Connectivity guide**
Always connect a device to the TV with the **highest quality connection available**. Also, use good quality cables to ensure a good transfer of picture and sound.

If you need help to connect several devices to the TV, you can visit the **Philips TV connectivity guide**. The guide offers information on how to connect and which cables to use.

Go to **www.connectivityguide.philips.com**

**Antenna**
If you have a Set-top box (a digital receiver) or Recorder, connect the antenna cables to run the **antenna signal** through the Set-top box and/or Recorder first before it enters the TV. In this way, the antenna and the Set-top box can send possible additional channels to the Recorder to record.

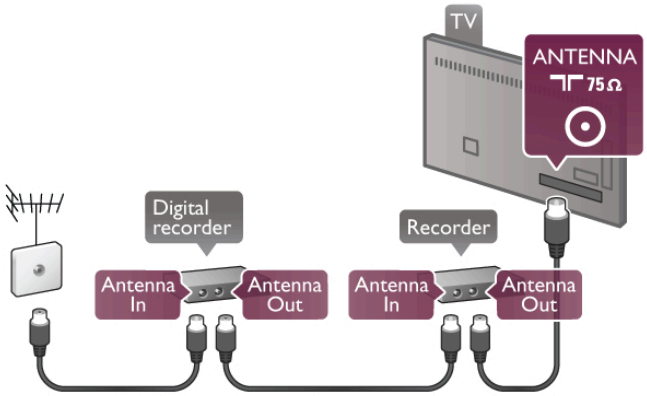


**HDMI**
An **HDMI** connection has the best picture and sound quality. One HDMI cable combines video and audio signals. Use an HDMI cable for High Definition (HD) TV signals. For best signal quality transfer, do not use an HDMI cable longer than 5 m.

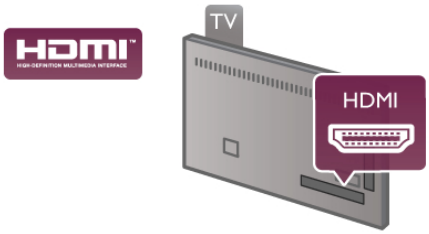


**EasyLink HDMI CEC**
If your devices are connected with HDMI and have EasyLink, you can operate them with the TV remote control. EasyLink HDMI CEC must be switched on on the TV and the connected device.
In **Help**, press ☰ **List** and look up **EasyLink HDMI CEC** for more information on using EasyLink.

**HDMI ARC**
All of the HDMI connections on the TV have ARC (Audio Return Channel).
If the device, typically a Home Theatre System (HTS), also has the HDMI ARC connection, connect it to any of the HDMI connections on this TV. With the HDMI ARC connection, you do not need to connect the extra audio cable that sends the sound of the TV picture to the HTS. The HDMI ARC connection combines both signals.
You can use any HDMI connection on this TV to connect the HTS but ARC is only available for 1 device/connection at a time.

In case you prefer to switch off ARC on the HDMI connections, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **TV settings** > **Sound** > **Advanced** > **HDMI ARC**.

**DVI to HDMI**

Use a DVI to HDMI adapter if your device only has a DVI connection. Use one of the HDMI connections and add an Audio L/R cable (mini-jack 3.5 mm) to Audio In VGA/DVI for sound, on the back of the TV.

### Copy protection

DVI and HDMI cables support HDCP (High-bandwidth Digital Content Protection). HDCP is a copy protection signal that prevents copying content from a DVD disc or Blu-ray Disc. Also referred to as DRM (Digital Rights Management).

### Y Pb Pr

**Component Video YPbPr** is a high quality connection. The YPbPr connection can be used for High Definition (HD) TV signals. Next to the Y, Pb and Pr signals add the Audio Left and Right signals for sound.

Use the supplied YPbPr adapter cable to connect your device. Match the YPbPr (green, blue, red) connector colours with the cable plugs when you connect.
Use the supplied Audio L/R cinch to mini-jack (3.5mm) adapter cable if your device also has sound.

### SCART

**SCART** is a good quality connection. The SCART connection can be used for CVBS and RGB video signals but cannot be used for High Definition (HD) TV signals. The SCART connection combines video and audio signals.

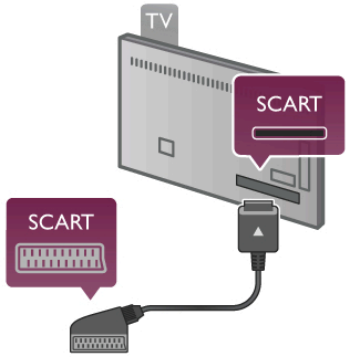


Use the supplied SCART adapter cable to connect your device.

### Audio Out - Optical

**Audio Out - Optical** is a high quality sound connection. This optical connection can carry 5.1 audio channels. If your audio device, typically a Home Theatre System (HTS), has no HDMI ARC connection, you can connect this sound cable to an Audio In - Optical connection on the HTS. This Audio cable will send the sound of the TV to the HTS.

You can set the type of the audio out signal to fit the audio capabilities of your Home Theatre System.
In **Help**, press ☰ **List** and look up **Audio Out settings** for more information.

If the sound does not match the video on screen, you can adjust the audio to video synchronization.
In **Help**, press ☰ **List** and look up **Audio to video sync** for more information.

### VGA

Use a **VGA** cable (D-sub 15 connector) to connect a computer to the TV. With the VGA connection you can use the TV as a computer monitor. You can add an **Audio L/R** cable for sound (mini-jack 3.5 mm).

You can also connect your computer wirelessly, to watch the multi media files stored on your computer on your TV screen.
In **Help**, press ☰ **List** and look up **Network, wireless** for more information.

## EasyLink HDMI CEC

### HDMI CEC

With **EasyLink** you can operate a connected device with the TV remote control. EasyLink uses HDMI CEC* to communicate with the connected devices. Devices must support HDMI CEC and must be connected with an HDMI connection.
** Consumer Electronics Control*

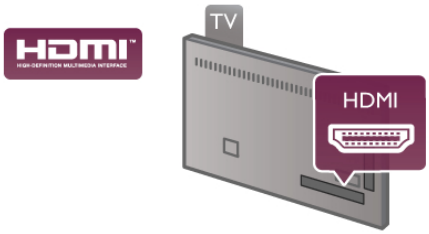


### EasyLink setup

The TV comes with EasyLink switched on. Make sure that all HDMI CEC settings are properly set up on the connected EasyLink devices. EasyLink might not work with devices from other brands.

### HDMI CEC on other brands

The HDMI CEC functionality has different names on different brands. Some examples are: Anynet, Aquos Link, Bravia Theatre Sync, Kuro Link, Simplink and Viera Link. Not all brands are fully compatible with EasyLink.

Example HDMI CEC branding names are property of their respective owners.

### Operate devices

To operate a device connected to HDMI and set up with EasyLink, select the device -or its activity- in the list of TV connections. Press **SOURCE**, select a device connected to an HDMI connection and press **OK**.

Once the device is selected, the TV remote control can control the device. However the (Home) and **OPTIONS** keys and some other typical TV keys, like **Ambilight**, are not forwarded to the device.
If the key you need is not on the TV remote control, you can select the key in the Options menu. Press **OPTIONS** and select **Controls** in the menu bar. Select the device key you need on screen and press **OK**.
Some very specific device keys might not be available in the Controls menu.

### EasyLink settings

The TV comes with all EasyLink settings switched on. You can switch off any EasyLink setting independently.

### EasyLink

To switch off EasyLink completely, press and select **Setup** and press **OK**.
Select **TV settings** > **General settings** > **EasyLink** > **EasyLink**.
Select **Off** and press **OK**.

### EasyLink Remote Control

If you want devices to communicate but you don't want to operate them with the TV remote control, you can switch off EasyLink remote control separately.
In the EasyLink settings menu, select **EasyLink Remote Control** and select **Off**.

### Pixel Plus link

Some devices, a DVD or Blu-ray Disc player, might have their own picture quality processing. To avoid bad picture quality caused by interference with the TV processing, the picture processing of these devices should be disabled. The TV comes with Pixel Plus link switched on and disables the picture quality processing of recent Philips devices connected to the TV.
To switch off Pixel Plus link, in the EasyLink settings menu, select **Pixel Plus link** and select **Off**.

### Auto subtitle shift

If you play a DVD or Blu-ray Disc on a Philips disc player that supports subtitles, the TV can move the subtitles upwards. Subtitles will be visible whatever Picture format you select.
The TV comes with Auto subtitle shift switched on.
To switch off Auto subtitle shift, in the EasyLink settings menu, select **Auto subtitle shift** and select **Off**.

### CI+

This TV is ready for the CI+ Conditional Access.

With CI+ you can watch premium HD programmes, like movies and sports, offered by digital TV broadcasters in your region. These programmes are scrambled by the TV broadcaster and descrambled with a prepaid CI+ module. Digital TV broadcasters provide this CI+ module (Conditional Access Module - CAM) when you subscribe to their premium programmes. These programmes have a high level of copy protection.

Contact a digital TV broadcaster for more information on terms & conditions.

In **Help**, press **List** and look up **Common Interface CAM** for more information on connecting a CAM.

### CAM

#### Insert a CAM module

Switch off the TV before inserting a CAM.
Look on the CAM for the correct method of insertion. Incorrect insertion can damage the CAM and the TV.

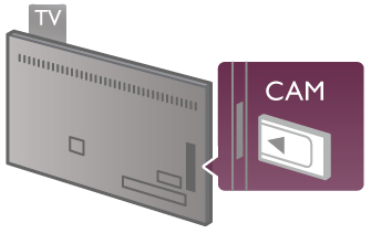


Use the Common Interface slot on the left side of the TV to insert the CAM card*. Gently insert the CAM as far as it will go and leave it in the slot permanently. It may take a few minutes before the CAM is activated. Removing the CAM will deactivate the broadcast service on TV.

* The Common Interface slot accepts a PC card (PCMCIA) in which you insert a smart card. Both cards should be supplied by the TV broadcaster.

If a CAM is inserted and subscription fees have been paid, (connection methods can differ), you can watch the TV broadcast. The inserted CAM is exclusively for your TV.

### CAM settings

To set passwords or PIN codes for the CAM TV broadcast, press and select **Setup** and press **OK**.
Select **Channel settings** > **Common Interface**.
Select the CAM TV broadcaster and press **OK**.

## Set-top box STB

Use 2 antenna cables to connect the antenna to the Set-top box (a digital receiver) and the TV.

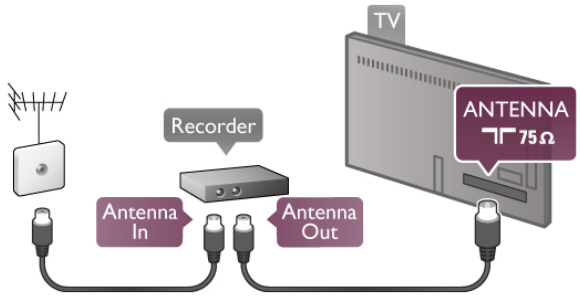


Next to the antenna connections, add an HDMI cable to connect the Set-top box to the TV. Alternatively, you can use a SCART cable if the Set-top box has no HDMI connection.

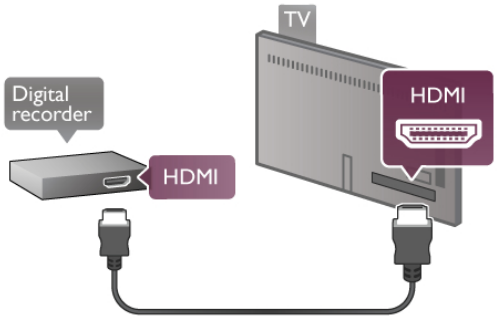


**Switch off timer**
Switch off this automatic timer, if you only use the remote control of the Set-top box. Do this to prevent the TV to switch off automatically after a 4 hour period without a key press on the remote control of the TV.

To switch off the Switch off timer, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **TV settings** > **General settings** > **Switch off timer** and select **Off**.

## Satellite receiver

Connect the dish antenna cable to the Satellite receiver.

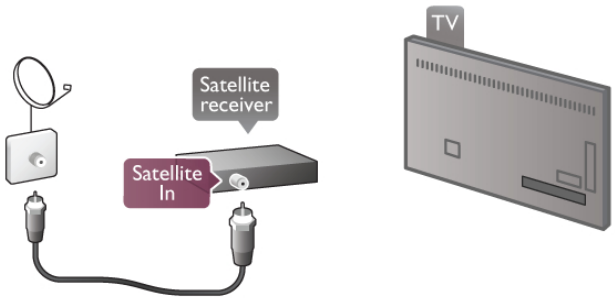


Next to the antenna connection, add an HDMI cable to connect the device to the TV. Alternatively, you can use a SCART cable if the device has no HDMI connection.

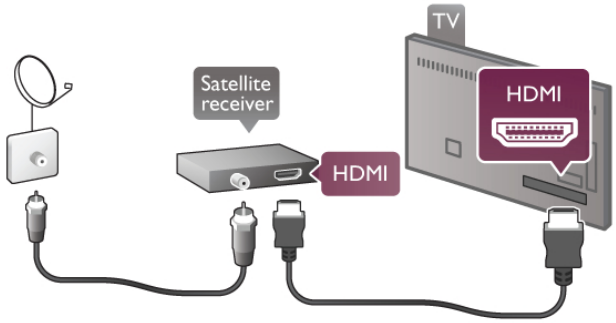


**Switch off timer**
Deactivate the Switch off timer, if you only use the remote control of the Satellite receiver. Do this to prevent the TV to switch off automatically after a 4 hour period without a key press on the remote control of the TV.

To deactivate, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **TV settings** > **General settings** > **Switch off timer** and set the slider bar to **0**.

## Home Theatre System (HTS)

**Connect**
Use an HDMI cable to connect a Home Theatre System (HTS) to the TV. You can connect a Philips Soundbar or an HTS with a built-in disc player.

Alternatively, you can use a SCART cable if the device has no HDMI connection.

**HDMI ARC**
If your Home Theatre System has an HDMI ARC connection, you can use any HDMI connection on the TV to connect. All HDMI connections on the TV can offer the Audio Return Channel (ARC) signal. But once you connected the Home Theatre System, the TV can only send the ARC signal to this HDMI connection.
With HDMI ARC, you do not need to connect the extra audio cable. The HDMI ARC connection combines both signals.

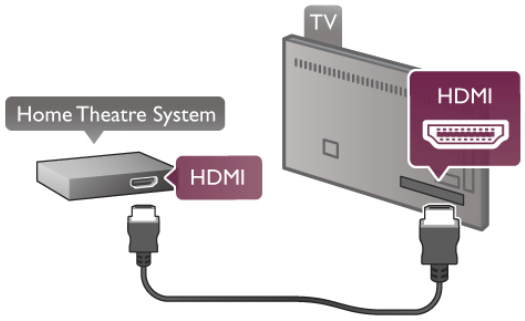


If the Home Theatre System has no HDMI ARC connection, add an optical audio cable to send the sound of the TV picture to the Home Theatre System.

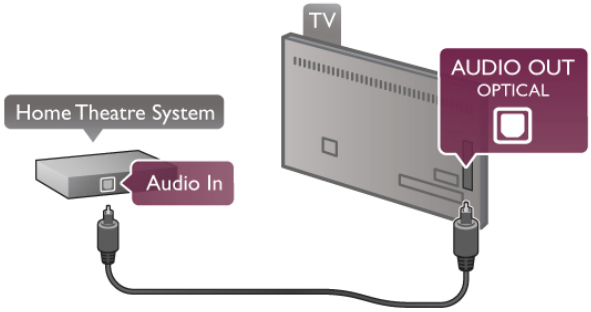


**Audio to video synchronisation (sync)**
If the sound does not match the video on screen, you can set a delay on most DVD Home Theatre Systems to match the sound and video. A mismatch can be visible in scenes with people talking. When they finish sentences before their lips stop moving.
In **Help**, press ☰ **List** and look up **Audio to video sync** for more information.

**Audio to video sync**
With a Home Theatre System (HTS) connected to the TV, the picture on TV and the sound from the HTS should be synchronised. A mismatch can be visible in scenes with people talking - when they finish sentences before their lips stop moving or just the opposite.

**Automatic audio to video sync**
With recent Philips Home Theatre Systems, the audio to video sync is automatically synchronised and always correct.

**Audio sync delay**
For some Home Theatre Systems you might need to adjust the audio sync delay to synchronise the audio to video. On the HTS, increase the delay value until there is a match between picture and sound. A delay value of 180ms may be required. Read the user manual of the HTS.

With a delay value set up on the HTS, you need to switch off Audio Out delay on the TV. To switch off Audio Out delay, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **TV settings** > **Sound** > **Audio Out delay**. Select **Off** and press **OK**.

**Audio Out Offset**
If you cannot set a delay on the Home Theatre System, you can set the TV to sync the sound.
To synchronize the sound on the TV, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **TV settings** > **Sound** > **Audio Out offset**. Use the slider bar to set the sound offset and press **OK**. The value set compensates the time necessary for the Home Theatre System to process the sound of the TV picture. You can set the offset in steps of 5ms. Maximum setting is -60ms. The Audio Out delay setting should be switched on.

**Audio Out Settings**
**Audio Out format**
The standard setting for Audio Out format is **Multichannel**. Home Theatre Systems with multichannel sound capabilities (Dolby Digital, DTS® or similar) can receive a compressed multichannel sound signal from a TV channel or a connected disc player.

To set the Audio Out format, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **TV settings** > **Sound** > **Audio Out format**.
If you have a Home Theatre System without any multichannel sound processing capabilities, select **Stereo**.

**Audio Out levelling**
Use the Audio Out levelling setting to level the volume (loudness) of the TV and the Home Theatre System when you switch over from one to another. Volume differences can be caused by differences in sound processing.

To level the difference, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **TV settings** > **Sound** > **Audio Out levelling**.
If the volume difference is large, select **More**. If the volume difference is small, select **Less**.

Audio Out levelling affects both the Audio Out - Optical and HDMI-ARC sound signals.

## Blu-ray Disc Player

Use an HDMI cable to connect the Blu-ray Disc player to the TV.

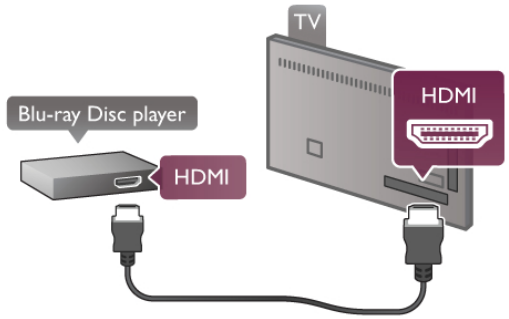


If the Blu-ray Disc player has EasyLink HDMI CEC, you can operate the player with the TV remote control.
In **Help**, press ☰ **List** and look up **EasyLink HDMI CEC** for more information.

## DVD Player

Use an HDMI cable to connect the DVD player to the TV. Alternatively, you can use a SCART cable if the device has no HDMI connection.

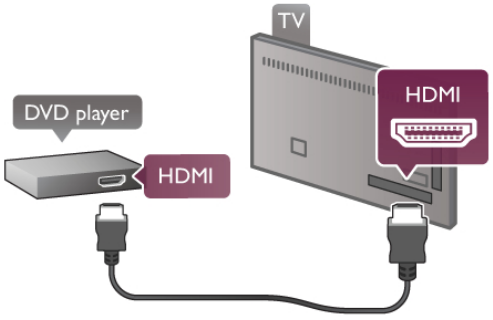

If the DVD player is connected with HDMI and has EasyLink HDMI CEC, you can operate the player with the TV remote control.
In **Help**, press ☰ **List** and look up **EasyLink HDMI CEC** for more information.

## Game

Connect a game console to the side or back of the TV.
You can use an HDMI, YPbPr or SCART connection. If your game console only has Video (CVBS) and Audio L/R output, use a Video Audio L/R to SCART adapter to connect to the SCART connection.

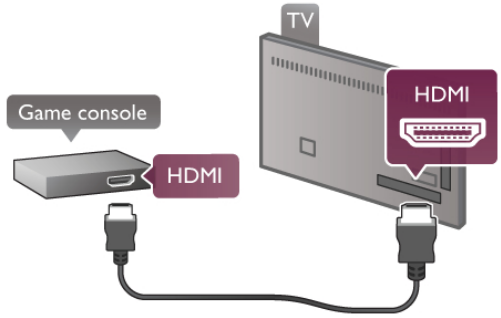


For best quality, use an HDMI cable to connect the game console to the side of the TV.
If the game console is connected with HDMI and has EasyLink HDMI CEC, you can operate the game console with the TV remote control.

Alternatively, use a SCART adapter (not supplied) to connect the game console to the TV.

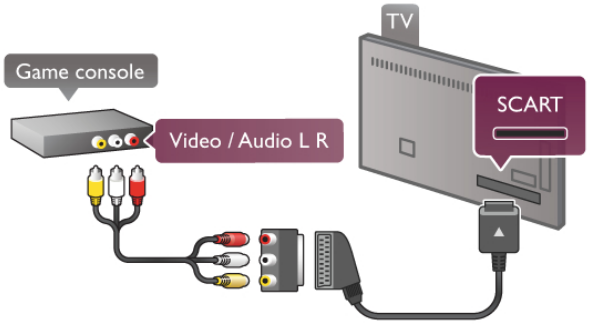


## USB Hard Drive

### What you need

If you connect a USB Hard Drive, you can pause or record a TV broadcast. The TV broadcast needs to be a digital broadcast (DVB broadcast or similar). Also, you can connect a USB Hard Drive to watch movies from an online video store (Video On Demand).

### To watch rental videos

If you are connected with the Internet, you can rent a movie from an online video store. Open **Smart TV** and start a rental video App from the **App gallery**.

To download a rental video, you can connect a 8GB USB flash drive but alternatively, you can use a USB Hard Drive. When installing the USB Hard Drive, you can select if you also want to use the USB Hard Drive for rental videos. Even when the rental video store uses video streaming, you might need the USB Hard Drive to store some video buffer.

### To pause

To pause a broadcast, you need a USB 2.0 compatible Hard Drive with a minimum of 32GB Hard Drive space and a minimum writing speed of 30MB/s.

### To record

To pause and record broadcasts, you need a Hard Drive with a minimum of 250GB Hard Drive space.

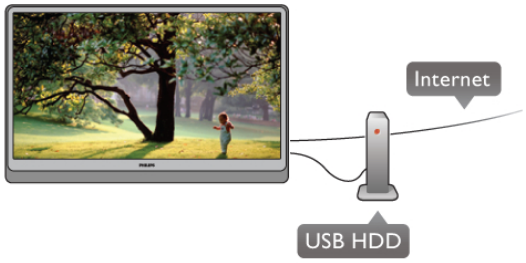


### TV guide

Before you decide to buy a USB Hard Drive to record, you can check if you can record digital TV channels in your country.
Press **Guide** on the remote control. If there is a Record button on the TV guide page, you can record programmes from digital TV channels.
If the Record button is not available, check if the TV guide is updated from the Internet.
To check if the TV guide gets its data from the Internet, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **TV settings** > **General settings** > **TV guide**. Select **From the Internet** and press **OK**.

In **Help**, press ☰ **List** and look up **USB Hard Drive, Installation** to install a USB Hard Drive on this TV.

### Installation

Before you can pause or record a broadcast, you must connect and format a USB Hard Drive. If you want to record a broadcast with TV guide data from the Internet, you need to have the Internet connection installed on your TV before you install the USB Hard Drive.

**1 -** Connect the USB Hard Drive to a **USB** connection on the back of the TV. You can use any USB connection on the TV but the connection next to HDMI 1 is the most practical one. Do not connect another USB device to the other USB ports when formatting.

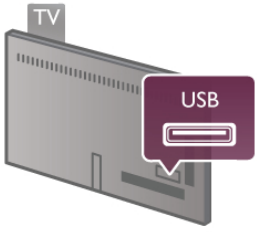


**2 -** Switch on the USB Hard Drive and the TV.

**3 -** When the TV is tuned to a digital TV channel, press ⏸ (Pause). Trying to pause will start the formatting. Formatting removes all files from the connected USB Hard Drive.
Follow the instructions on screen.
When the USB Hard Drive is formatted, leave it connected permanently.

**Warning**
The USB Hard Drive is formatted exclusively for this TV, you cannot use the stored recordings on another TV or PC. Do not copy or change recording files on the USB Hard Drive with any PC application. This will corrupt your recordings. When you format another USB Hard Drive, the content on the former will be lost. A USB Hard Drive installed on your TV will need reformating for use with a computer.

In **Help**, press ☰ **List** and look up **Pause TV** or **Recording** to pause or record TV channels.

## USB keyboard or mouse

**USB keyboard**
Connect a USB keyboard (USB-HID type) to enter text on your TV.

You can connect a keyboard and a mouse to the TV.
Use the **USB** connection on the side of the TV to connect.

**Install the keyboard**
To install the USB keyboard, switch on the TV and connect the USB keyboard to one of the **USB** connections on the side of the TV. When the TV detects the keyboard for the first time, you can select your keyboard lay-out and test your selection.
If you select a Cyrillic or Greek keyboard lay-out first, you can select a secondary Latin keyboard lay-out.
To change the keyboard lay-out setting later on, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **TV settings** > **General settings** > **USB mouse and keyboard** > **Keyboard settings** and press **OK**.

**Keys for channel renaming**
- Enter ↵ = OK
- Backspace ← = delete character before cursor
- Arrow keys = navigate within a text field
- To switch between keyboard lay-outs, if a secondary lay-out is set, press the **Alt + Shift** keys simultaneously.

**Keys for Smart TV Apps and Internet pages**
- **Tab** and **Shift Tab** = Next and Previous
- **Home** = scroll to the top of the page
- **End** = scroll to the bottom of the page
- **Page Up** = jump one page up
- **Page Down** = jump one page down
- **+** = zoom in one step
- **-** = zoom out one step
- * = fit to width

In **Help**, press ☰ **List** and look up **USB mouse**, to connect a USB mouse.

**USB mouse**
You can connect a USB mouse (USB-HID type) to navigate pages on the Internet.
On an Internet page, you can select and click on links more easily. The USB mouse cannot navigate in Smart TV App pages nor navigate in the TV menus.

**Install the mouse**
Switch the TV on and connect the USB mouse to one of the **USB** connections on the side of the TV. You can also connect the USB mouse to a connected USB keyboard.

**Mouse clicks**
- **Left click** = OK
- **Right click** = Back ⮌
You can use the scroll wheel to scroll pages up and down.

In **Help**, press ☰ **List** and look up **USB keyboard**, to connect a USB keyboard.

## USB flash drive

You can view photos or play your music and videos from a connected USB flash drive.

Insert a USB flash drive into the **USB** connection on the left-hand side of the TV while the TV is switched on.

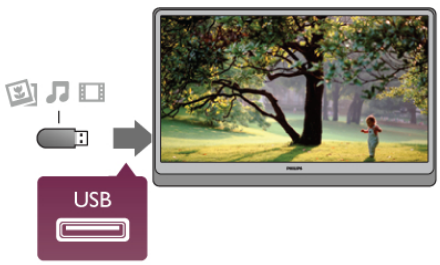


The TV detects the flash drive and opens a list showing its content.
If the contents list does not appear automatically, press ⮕ **SOURCE**, select **USB** and press **OK**.

To stop watching the USB flash drive content, press **TV** or select another activity.
To disconnect the USB flash drive, you can pull out the flash drive anytime.

In **Help**, press **List** and look up **Videos, photos and music**, to watch or listen to content from an USB flash drive.

## Photo camera

To view photos stored on your digital photo camera, you can connect the camera directly to the TV.

Use the **USB** connection on the left side of the TV to connect. Switch on the camera after you made the connection.

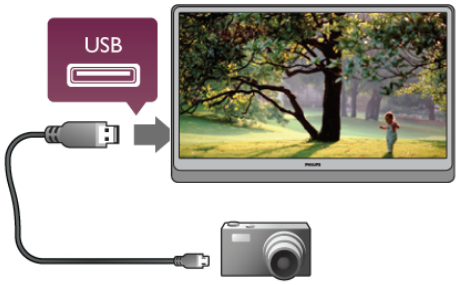


If the contents list does not appear automatically, press **SOURCE**, select **USB** and press **OK**.
Your camera might need to be set to transfer its content with PTP (Picture Transfer Protocol). Read the user manual of the digital photo camera.

In **Help**, press **List** and look up **Videos, photos and music** for more information on viewing photos.

## Camcorder

Connect a camcorder to the side or back of the TV. You can use an HDMI, YPbPr or SCART connection. If your camcorder only has Video (CVBS) and Audio L/R output, use a Video Audio L/R to SCART adapter to connect to the SCART connection.

For best quality, use an HDMI cable to connect the camcorder to the side of the TV.

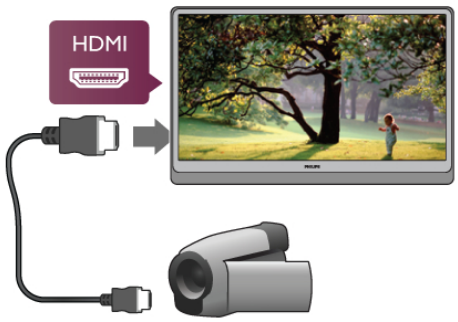


Or use a SCART adapter to connect the camcorder to the TV.

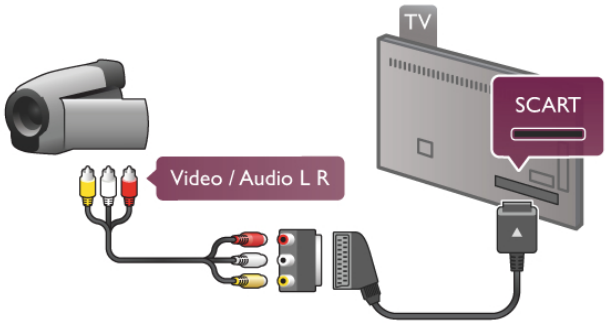


## Computer

You can connect your computer to the TV and use the TV as a PC monitor.

### With VGA

Use a VGA cable to connect the computer to the **VGA** connector and add an audio L/R cable to connect the VGA Audio to **AUDIO IN - VGA/DVI** on the back of the TV.

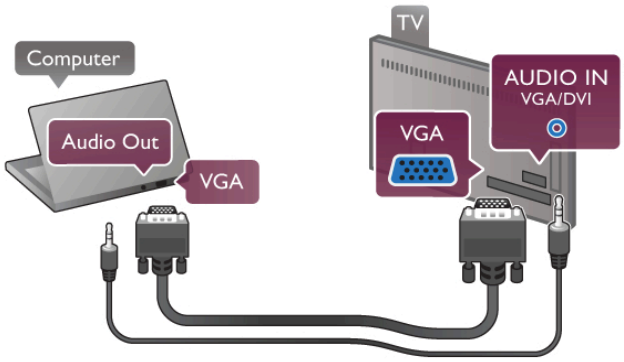


### With HDMI

Use an HDMI cable to connect the computer to the TV.

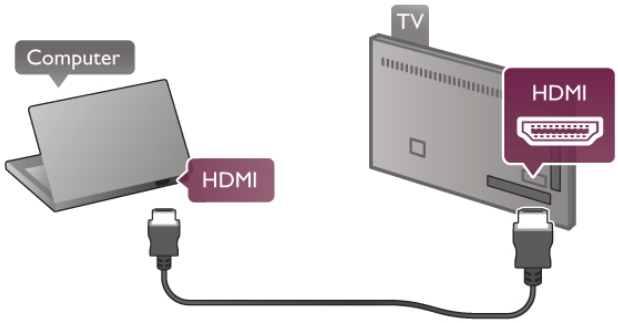


### With DVI to HDMI

Alternatively, you can use a DVI to HDMI adapter to connect the PC to **HDMI** and an audio L/R cable to **AUDIO IN - VGA/DVI** on the back of the TV.

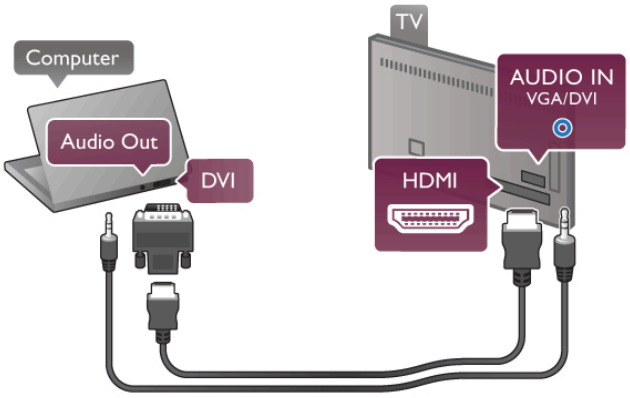


**Ideal monitor setting**
If your computer is added as a **Computer** type of device in the Source menu (list of connections), the TV is set to the ideal **Computer** setting automatically.

If you use your computer to watch movies or use it to play games, you might want to set the TV back to the ideal TV watching or gaming setting.

To set the TV to the ideal setting manually . . .
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **Picture** > **Game or computer** and press **OK**.
**3 -** Select **Game** (for gaming) or select **Off** (for watching a movie) and press **OK**.
**4 -** Press ↩, repeatedly if necessary, to close the menu.
Remember to set the Game or computer setting back to **Computer** when you stop playing the game.

**Picture format - Unscaled**
Additionally to the automatic settings, you can also set the Picture format to Unscaled - an expert pixel for pixel display mode (black bars may appear).
**1 -** Press ⫶⫶ **OPTIONS** and select ⫶⫶ **Options** in the menu bar.
**2 -** Select **Picture format** > **Unscaled** and press **OK**.

In **Help**, press ☰ **List** and look up **Display resolutions**, for an overview of the supported PC resolutions.

2.6
# Setup menu

In this **Help**, press ☰ **List** and look up the topic you need in the alphabetical list. Select the topic and press OK to open the Help page for more information.

2.7
# TV stand and wall mounting

## TV Stand

Always make sure to position the TV on a solid surface when it is mounted on the TV stand.

You can find the mounting instructions in the Quick Start Guide that came with the TV.

In case you lost this guide, you can download the guide from www.philips.com
Use the product type number of the TV to look for the Quick Start Guide to download.

Look up and read Wall mounting with ☰ List, to mount the TV on a wall.

## Wall mounting

Refer to the TV Quick start guide for information on the type of wall mount to purchase for your TV. For instructions on how to wall mount your TV, refer to the documentation included with your purchased wall mount.

**Caution**
Read and understand all safety information included with your wall mount before wall mounting the TV.
TP Vision Netherlands B.V. bears no responsibility for improper wall mounting of the TV that results in accident or injury.

2.8
# Safety and care

## Safety

Read and understand all safety instructions before you use the TV. If damage is caused by failure to follow instructions, the warranty does not apply.

**Risk of electric shock or fire!**

- Never expose the TV to rain or water. Never place liquid containers, such as vases, near the TV. If liquids are spilt on or into the TV, disconnect the TV from the power outlet immediately. Contact Philips Consumer Care to have the TV checked before use.
- Never expose the TV, remote control or batteries to excessive heat. Never place them near burning candles, naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the TV.
- Never place heavy objects on the power cord.
- Avoid force coming onto power plugs. Loose power plugs can cause arcing or fire. Ensure that no strain is exerted on the power cord when you swivel the TV screen.
- To disconnect the TV from the mains power, the power plug of the TV must be disconnected. When disconnecting the power, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

**Risk of injury or damage to the TV!**

- Two people are required to lift and carry a TV that weighs more than 25 kg or 55 lbs.
- If you mount the TV on a stand, only use the supplied stand. Secure the stand to the TV tightly. Place the TV on a flat, level surface that can support the weight of the TV and the stand.
- When wall mounted, ensure that the wall mount can safely bear the weight of the TV set. TP Vision Netherlands B.V. bears no responsibility for improper wall mounting that results in accident, injury or damage.
- Parts of this product are made of glass. Handle with care to avoid injury or damage.

**Risk of damage to the TV!**
Before you connect the TV to the power outlet, ensure that the power voltage matches the value printed on the back of the TV. Never connect the TV to the power outlet if the voltage is different.

**Risk of injury to children!**
Follow these precautions to prevent the TV from toppling over and causing injury to children:

- Never place the TV on a surface covered by a cloth or other material that can be pulled away.
- Ensure that no part of the TV hangs over the edge of the mounting surface.
- Never place the TV on tall furniture, such as a bookcase, without anchoring both the furniture and TV to the wall or a suitable support.
- Teach children about the dangers of climbing on furniture to reach the TV.

**Risk of swallowing batteries!**
The remote control may contain coin-type batteries which can easily be swallowed by small children. Keep these batteries out of reach of children at all times.

**Risk of overheating!**
Never install the TV in a confined space. Always leave a space of at least 10 cm or 4 inches around the TV for ventilation. Ensure curtains or other objects never cover the ventilation slots on the TV.

**Lightning storms**
Disconnect the TV from the power outlet and antenna before lightning storms. During lightning storms, never touch any part of the TV, power cord or antenna cable.

**Risk of hearing damage!**
Avoid using earphones or headphones at high volumes or for prolonged periods of time.

**Low temperatures**
If the TV is transported in temperatures below 5°C or 41°F, unpack the TV and wait until the TV temperature reaches room temperature before connecting the TV to the power outlet.

**Electrical disturbances**
If the apparatus does not return to a previously viewed mode due to an external electrical disturbance (for example, electrostatic discharge), user intervention is required.

## Screen care

- Never touch, push, rub or strike the screen with any object.
- Unplug the TV before cleaning.
- Clean the TV and frame with a soft damp cloth and wipe gently. Avoid touching the Ambilight LED's on the backside of the TV. Never use substances such as alcohol, chemicals or household cleaners on the TV.
- To avoid deformations and colour fading, wipe off water drops as quickly as possible.
- Avoid stationary images as much as possible. Stationary images are images that remain onscreen for extended periods of time. Stationary images include onscreen menus, black bars, time displays, etc. If you must use stationary images, reduce screen contrast and brightness to avoid screen damage.

## Temperature and humidity

In rare occasions, depending on temperature and humidity, minor condensation can occur on the inside of the TV glass front (on some models). To prevent this, do not expose the TV to direct sunlight, heat or extreme humidity. If condensation occurs, it will disappear spontaneously while the TV is playing for a few hours. The condensation moisture will not harm the TV or cause malfunction.

3
# TV

3.1
## Switch on

### Switch on and off

Make sure you plugged in the mains power on the back of the TV before you switch on the TV.
If the red indicator light is off, press ⏻ on the front of the TV - the red indicator will light up.

With the TV on standby, press ⏻ on the remote control to switch the TV on. Alternatively, you can use the **CH+**, **CH-** and ⌂ key to switch the TV on.

**Quick start**
To switch on the TV faster than usual, you can set the TV in **Quick start** mode.
In **Help**, press ☰ **List** and look up **Quick start** for more information.

**Switch to standby**
To switch the TV to standby, press ⏻ on the remote control.

**Switch off**
To switch the TV off, press the small key ⏻ on the right of the TV on the back. There is no red indicator light. The TV is still connected to the mains power but consumes a minimum of energy. To switch off the TV completely, disconnect the power plug.
When disconnecting the power plug, always pull the power plug, never the cord. Ensure that you have full access to the power plug, power cord and outlet socket at all times.

### Quick start

With Quick start, the TV can start up faster than usual. When you switch the TV on from standby the TV picture already appears after a few seconds, if Quick start is activated.

The TV can remember your daily habit of watching TV. Some time before you usually switch on the TV, Quick start will activate automatically, allowing you to switch on quickly. Alternatively, you can select up to 3 fixed time frames a day during which the TV is ready to switch on quickly.

When you switch the TV back to standby, Quick start stays active until the set time frame ends.

**Activate**
To set the Quick start activation, press ⌂ and select ⚙ **Setup** and press **OK** to open the Setup menu.
Select **TV settings** > **General settings** > **Quick start** > **Activation**. You can select Automatic or Manual.

- **Automatic**
Select **Automatic** to activate Quick start automatically. The TV remembers your watching habit and activates Quick start during these time frames. With Automatic, the TV can set up to 4 time frames of 1 hour.

- **Manual**
Select **Manual** to activate Quick start during 3 fixed time frames a day. As an example, you can set a time frame in the morning, one at noon and one in the evening. For each time frame, you can set the time span yourself.
If Quick start is set to Manual, you can also select a **Standby delay**. With Standby delay, you can set the TV to keep Quick start active for some time after you switched the TV to standby. You can set the delay up to 1 hour in steps of 15 minutes.

**Specifics**
The TV clock has to work properly to activate Quick start.
Quick start activation cannot be longer than a 4 hour time frame.
Quick start increases the energy consumption during standby.

3.2
## Remote control

### Key overview

**Top**

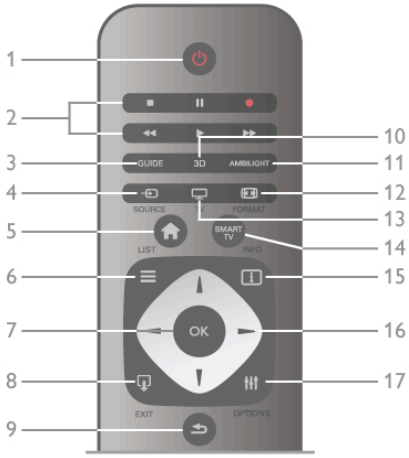

**1 - Standby**
To switch the TV on or back to standby.
**2 - Playback and record** keys

- Play ▶, to playback
- Pause ❚❚, to pause playback
- Stop ■, to stop playback
- Rewind ◀◀, to rewind
- Fast Forward ▶▶,to wind fast forward
- Record ●, to record now

**3 - GUIDE**
To open or close the TV guide.
**4 - SOURCE**
To open or close the list of connections.
**5 - Home**
To open or close the home menu.
**6 - LIST**
To open or close the channel list or your list of photos, music or videos.
**7 - OK** key
To confirm a selection.
**8 - EXIT**
To go back to your last chosen connected device, e.g. digital receiver.
**9 - Back**
To go back to the last chosen channel. To close a menu without changing a setting. To go back to the previous Text or Smart TV Internet page.
**10 - 3D**
To open or close the 3D menu.
**11 - AMBILIGHT**
To switch Ambilight on or off and to switch Ambilight on in standby.
**12 - FORMAT**
To open or close the Format menu.
**13 - TV**
To switch to Watch TV.
**14 - SMART TV**
To open the Smart TV start page.
**15 - INFO**
To open or close Info.
**16 - Navigation keys**
To navigate up, down, left or right.
**17 - OPTIONS**
To open or close the Options menu.

**Bottom**

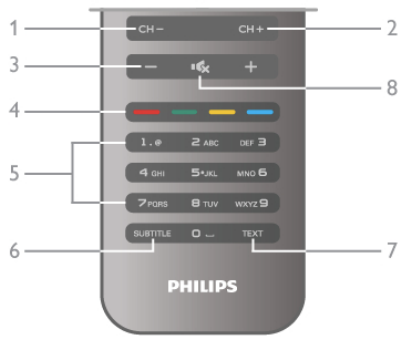


**1 - CH-**, Channel -
To switch to the previous channel in the channel list, the previous page in Text or the previous chapter on a disc.
**2 - CH+**, Channel +
To switch to the next channel in the channel list, the next page in Text or the next chapter on a disc.
**3 - Volume -** and **+**
To adjust the volume level.
**4 - Colour keys**
Direct selection of options.
**5 - Number keys** and **text keypad**
To select a TV channel directly or to enter text.
**6 - SUBTITLE**
To switch subtitles on, off or on during mute.
**7 - TEXT**
To open or close Text.
**8 - Mute**
To mute the sound or to restore it.

## IR Sensor

Always make sure you point the remote control at the remote control infrared sensor on the front of the TV.

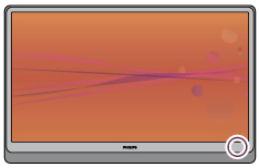

## Batteries

To replace the batteries, open the battery compartment at the back of the remote control.

**1 -** Slightly press the arrow on the back of the remote control and slide the battery cover open in the direction of the arrow.
**2 -** Replace the old batteries with 2 type AAA-LR03-1.5V batteries. Make sure the + and the - ends of the batteries line up correctly.
**3 -** Reposition the battery cover and close it by sliding the cover until it clicks.

Remove the batteries if you are not using the remote control for a long time.
Dispose of batteries according to the end of use directives.
In **Help**, press **List** and look up **End of use** for more information.

## Cleaning

Your remote control is treated with a scratch-resistant coating.

To clean the remote control, use a soft damp cloth. Never use substances such as alcohol, chemicals or household cleaners on the TV or remote control.

3.3
# Watch TV

## Channels

### Switch channels
To watch TV channels, press **TV**. The TV tunes to the TV channel you last watched.

Alternatively, press to open the Home menu and select **Watch TV** and press **OK**.

### Switch channels
To switch channels, press **CH+** or **CH-**. If you know the channel number, type in the number with the number keys. Press **OK** after you entered the number to switch channel immediately.
To switch back to the previously tuned channel, press .

### To switch to a channel from a channel list
While watching a TV channel, press **LIST** to open the channel lists.
Select a list in the row of tabs.

In a channel list, navigate to a TV channel or radio station. With the highlight on its icon, press **OK** to switch to the TV channel or listen to the radio station.
The channel list can have several pages with channels. To view the next or previous page, press **CH-** or **CH+**.
To close the channel lists without switching channel, press **LIST** again.

### Radio channels
If digital broadcasting is available, digital radio stations are installed during installation. Switch to a radio channel just like you switch to a TV channel. A Cable (DVB-C) channel installation usually places radio stations from channel number 1001 onwards.

### Options on channels
While watching a TV channel, depending on the type of channel (analogue or digital) you are watching or depending on the TV settings you made, some options are available.

### Open the options
While watching a TV channel, press **OPTIONS** and select the **Options** tab in the menu bar.

### Universal access
With Universal access switched on, you can set some options for hearing impaired and visually impaired people.
In **Help**, press **List** and look up **Universal access** for more information.

### Video selection
Digital TV channels can offer multi video signals (multi-feed broadcasts), different camera viewpoints or angles of the same event or different programmes on one TV channel. The TV shows a message if any such TV channels are available.

### Subtitles
Switch **Subtitles on** or **Subtitles off** with this option. Select **On during mute** to show subtitles only when the sound is muted with .

### Subtitle language
For digital broadcast, you can select an available subtitle language temporarily if none of your preferred languages are available.
In **Help**, press **List** and look up **Subtitles** for more information.

### Audio languages
For digital broadcast, you can select an available audio language temporarily if none of your preferred languages are available.
In **Help**, press **List** and look up **Audio languages** for more information.

### Dual I-II
If an audio signal contains two audio languages but one language - or both - has no language indication, this option is available.

### Common interface
If prepaid premium content is available from a CAM, you can set the provider settings with this option.

### HbbTV on this channel
You can block the HbbTV pages from a channel that offers HbbTV.
In **Help**, press **List** and look up **HbbTV** for more information.

### Status

Select **Status** to view technical information on the channel (if it is analogue or digital) or a connected device you are watching.

### Channel lists

#### The channel lists

In the channel lists, you can find all installed TV and radio channels.

Next to the channel list **All**, which holds all installed channels, you can set up a list of **Favourites**, view the installed **Radio** stations separately or discover the newly added channels in **New**.

#### To switch to a channel from a channel list

While watching a TV channel, press ☰ **LIST** to open the channel lists.
Select one of the channel lists.

In a channel list, navigate to a channel or radio station. With the highlight on its icon, press **OK** to switch to the channel or listen to the radio station.
The channel list can have several pages with channels. To view the next or previous page, press **CH-** or **CH+**.
To close the channel lists without switching channel, press ☰ **LIST** again.

#### Mark as favourite

In the channel list **All**, you can set any channel as a favourite channel.
Navigate to the channel in the list and press **Mark as favourite**. The channel is added to the Favourite channel list.

#### Channel list options

According to the channel list on screen, press **OPTIONS** to select the following options:
- Digital / Analogue
- Free / Scrambled
- Lock
- Unlock

#### Channel logos

For most channels, the TV can show a channel logo. If you wish to hide these logos, you can switch them off.
To switch off **Channel logos** . . .
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **General settings** > **Channel logos** and press **OK**.
**3 -** Select **Off** and press **OK**.
**4 -** Press ⮌, repeatedly if necessary, to close the menu.

#### Rename channels

You can rename channels in any of the channel lists.

**1 -** In a channel list, highlight the channel you want to rename.
**2 -** Press **Rename**.

#### Enter text

To enter text, select the text entry field with the arrow keys. Use the remote control keypad as you do for SMS/text messaging to enter a character. The moment you start typing the on screen keyboard appears. You can select lowercase, uppercase, special characters and backspace with the colour keys.
Press ⮌ to delete a character.
Select **Done** to end Rename.

Alternatively, if your remote control has a keyboard on the back, you can use that keyboard.
In **Help**, press ☰ **List** and look up **Remote control keyboard** for more information.

#### Reorder channels

You can reorder -reposition- channels in the Favourite channel list.

In **Help**, press ☰ **List** and look up **Favourite channels** for more information.

#### Favourite channels

You can create a favourite channel list that only holds the channels you want to watch. With the Favourite channel list selected, you will only see your favourite channels when you switch through channels.

#### Create your Favourite channel list

**1 -** While watching a TV channel, press ☰ **LIST** to open the channel lists.
**2 -** Select **Favourites**.
**3 -** If the list is empty, the TV asks you to start adding channels right now. Press **OK**.
**4 -** Use the arrow keys to select a channel and press **OK** to make that channel a favourite channel. The order in which channels appear in the favourite list depends on the sequence in which you add them.

#### Add or remove favourites

To add or remove favourite channels from the Favourite channel list, open the list and press **OPTIONS**, select **Add / remove favourites** and press **OK**.
Use the arrow keys to select a channel and press **OK** to add or remove it from the favourites list.

#### Reorder

You can reorder -reposition- channels in the Favourite channels list.
**1 -** In the channel list **Favourites**, highlight the channel you want to reposition.
**2 -** Press **Move**.

**3 -** With the arrow keys, reposition the channel where you want it. Alternatively, you can enter the new position directly with the number keys.
**4 -** Press **OK** to confirm the position. Or, to cancel the repositioning, press **Cancel**.
You can highlight another channel and do the same.

### Add or remove favourites in other channel lists

You can mark channels and radio stations as favourites from the **All**, **Radio** and **New** channel list.
In these lists, highlight a channel you want to add to the favourite list and press **Mark as favourite**. The channel is marked with a star ★ and added to the Favourite channel list.
To unmark a favourite channel, highlight the channel in any channel list and press **Unmark as favourite**. The channel is removed from the Favourite channels list.

### Child lock

To prevent children from watching a channel or a programme, you can lock channels or lock age-rated programmes.

### Lock a channel

You can lock a channel to prevent children from watching it. To watch a locked channel you need to enter the Child lock code.
To lock a channel, while watching a TV channel, press **LIST** to open the **Channel lists**. In any list, select the channel you want to lock, press **OPTIONS** and select **Lock channel**. In a channel list, a locked channel is marked with a lock.
To unlock a channel, select the locked channel in the channel list and select the **Unlock channel** option. You will need to enter the Child lock code.

You cannot lock programmes from connected devices.

### Parental rating

Some digital broadcasters have rated their programmes. When the rating is equal or higher than the rating you have set for your child's age, the programme will be locked.
To watch a locked programme you must enter the child lock code. The parental age rating is set for all channels.

### Set an age rating

Press and select **Setup** and press **OK**.
Select **Channel settings** > **Child lock** > **Parental rating**.
To select an age rating, you must first enter your 4-digit child lock code. If no child lock code is set, you can set the code now.
When the code is entered, you can select the age rating.
When the rating of a programme is equal or higher than the rating you have set for your child's age, the programme will be locked. The TV will ask for the code to unlock the programme.
For some operators, the TV only locks programmes with a higher rating.

### Change code

To change the current Child lock code, press , select **Setup** and press **OK**.
Select **Channel settings** > **Child lock** > **Change code**.
Enter the current code and then enter the new code twice.
The new code is set.

### Forgotten your code?

If you have forgotten your code to unlock, call Consumer Care in your country. Find the telephone number on the documentation that came with the TV or go to www.philips.com/support.

## Channel installation

### Update channels

### Automatic update

If you receive digital channels, you can set the TV to automatically update the list with new channels.
Alternatively, you can start a channel update yourself.

### Automatic channel update

Once a day, at 6 AM, the TV updates the channels and stores new channels. New channels are stored in the All channels list but also in the New channels list. Empty channels are removed.
If new channels are found or if channels are updated or removed, a message is shown at TV start up. The TV must be in standby to automatically update channels.

To switch off the message at start up, press , select **Setup** and press **OK**.
Select **Channel settings** and press **OK**.
Select **Channel installation** > **Channel update message** > **Off**.

To switch off the Automatic channel update, press , select **Setup** and press **OK**.
Select **Channel settings** and press **OK**. Select **Channel installation** > **Automatic channel update** > **Off**.

### Start an update

To start an update yourself, press , select **Setup** and press **OK**.
Select **Search for channels** and press **OK**.
Select **Update channels** and follow the instructions on screen.
The update may take a few minutes.

In certain countries, the Automatic channel update is done while watching TV or any moment when the TV is in standby.

### New channels

New channels added with the automatic channel update are easy to find in the channel list **New**. The same new channels are also stored in the **All** or **Radio** channel list.

New channels are kept in the channel list New as long as you don't mark them as a favourite or tune to them.

In **Help**, press **List** and look up **Favourite channels** for marking channels as favourites.

### Reinstall channels

You can search for and reinstall channels and leave all other TV settings untouched. Alternatively, you can do a full new TV installation.

If a child lock code is set, you will need to enter this code before you can reinstall channels.

### Reinstall channels

To reinstall the channels only . . .
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **Search for channels** > **Reinstall channels** and press **OK**.
**3 -** Select **Antenna (DVB-T)** or **Cable (DVB-C)**. The channel search may take a few minutes. Follow the instructions on screen.

### Full installation

To redo a full TV installation . . .
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **Reinstall TV** and press **OK**. The installation may take a few minutes. Follow the instructions on screen.

### Factory settings

Factory settings sets the TV back to the original TV settings for picture, sound and Ambilight.
To switch back to the original Factory settings . . .
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **General settings** > **Factory settings** and press **OK**.
**3 -** Press **OK** to confirm.
**4 -** Press ⮌, repeatedly if necessary, to close the menu.

### Channel list copy

#### Introduction

Channel list copy is intended for dealers and expert users.

With **Channel list copy**, you can copy the channels installed on one TV onto another Philips TV of the same range. With Channel list copy, you avoid the time-consuming channel search by uploading a predefined channel list on a TV. The small file you copy fits every USB memory device.

#### Conditions

- Both TVs are from the same year range.
- Both TVs have the same product type suffix for DVB (H, K, M, T or D/00) in their type number and have the TV installed for the same country.
- Both TVs have the same hardware type. Check the hardware type on the TV type plate on the back of the TV. Typically noted as Q . . . LA
- Both TVs have compatible software versions. When you upload, an on-screen message will warn you if software versions are not compatible.

#### Current version

You can check the current version of the TV software with **Current version**.

#### Copy channel list

#### Copy a channel list

**1 -** Switch on the TV which has its channels installed. Plug in a USB memory device.
**2 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**3 -** Select **TV settings** > **General settings** > **Channel list copy** > **Copy to USB** and press **OK**. To copy the channel list from this TV, you might be asked to enter the Child lock code you entered during the installation.
**4 -** When copying is done, unplug the USB memory device.

Now you can upload the copied channel list onto another Philips TV.

#### Upload channel list

#### Upload a copied channel list

Depending on whether your TV is already installed or not, you must use a different way to upload a channel list.

#### To a TV that is not yet installed

**1 -** Plug in the power plug to start the installation and select language and country. You can skip Search for channels. Finish the installation.
**2 -** Plug in the USB memory device that holds the channel list of the other TV.
**3 -** To start the channel list upload, press ⌂, select ⚙ **Setup** and press **OK**.
**4 -** Select **TV settings** > **General settings** > **Channel list copy** > **Copy to TV** and press **OK**. You might be asked to enter the Child lock code of this TV.
**5 -** The TV notifies you if the channel list is copied to the TV successfully. Unplug the USB memory device.

#### To an already installed TV

**1 -** Verify the country setting of the TV. (To verify this setting, press ⌂, select ⚙ **Setup** and press **OK**. Select **Search for channels** > **Reinstall channels** and press **OK**. Press ⮌ and later **Cancel** to leave the Search for channels.)
If the country is correct continue with step 2.
If the country is not correct, you need to start a reinstallation. To start the reinstallation, press ⌂, select ⚙ **Setup** and press **OK**. Select **Search for channels** > **Reinstall channels** > **OK**. Select the correct country and skip the Search for channels. Finish the installation. When done, return to step 2.
**2 -** Plug in the USB memory device that holds the channel list of the other TV.
**3 -** To start the channel list upload, press ⌂, select ⚙ **Setup** and press **OK**.
**4 -** Select **TV settings** > **General settings** > **Channel list copy** > **Copy to TV** and press **OK**. You might be asked to enter the Child lock code of this TV.
**5 -** The TV notifies you if the channel list is copied to the TV successfully. Unplug the USB memory device.

### DVB-T or DVB-C

If both DVB-T and DVB-C reception is available in your country and if this TV is ready to receive DVB-T and DVB-C for your country, you have selected one or the other during the channel installation.

If you want to change the DVB setting to start a new channel installation, press ⌂, select ⚙ **Setup** and press **OK**.
Select **Channel settings** and press **OK**.
Select **Channel installation** > **Antenna connection** > **Antenna** or **Cable (DVB-C)** and press **OK**. Select the DVB setting you want.

### DVB-C channel installation

For ease of use, all DVB-C settings are set to automatic.
If your DVB-C provider gave you specific DVB-C values, the network ID or network frequency, enter these values when the TV asks for them during installation.
It might be necessary to adjust the scanning (full or quick scan) or enter a specific symbol rate in the **Settings** menu while installing. To set a **Symbol rate**, first set the Symbol rate to **Manual**.

### Channel number conflicts

In some countries, different TV channels (broadcasters) might have the same channel number. While installing, the TV shows the list with channel number conflicts. You need to select which TV channel you want to install on a channel number with multiple TV channels.

**DVB-T + DVB-C**
If you can use a DVB-T antenna input but also a DVB-C input, you can set up your TV for both DVB-T and DVB-C. Install one system followed by the other with the necessary settings.
Once each system is installed, you need to switch the antenna input signal on the **Antenna** connection on the back of the TV and set the TV in the appropriate system to view the installed channels on TV.
To select the DVB-T or DVB-C setting, see above.

**Reception quality**
If you receive digital channels, you can check the quality and signal strength of a channel.

If you have your own antenna, you can reposition the antenna to try and improve the reception.
To check the reception quality of a digital channel, switch to the channel.
Press ⌂, select ⚙ **Setup** and press **OK**.
Select **Channel settings** and press **OK**. Select **Channel installation** > **Digital : reception test** and press **OK**.

The digital frequency is shown for this channel. If the reception is poor, you can reposition your antenna. To check the signal quality of this frequency again, select **Search** and press **OK**.
To enter a specific digital frequency yourself, use the remote control digit keys. Alternatively, select the frequency, position the arrows on a number with ◄ and ► and change the number with ▲ and ▼. To check the frequency, select **Search** and press **OK**.

If you use DVB-C to receive channels, the options **Symbol rate mode** and **Predefined symbol rates** are available. For Symbol rate mode, select **Automatic**, unless your cable provider gave you a specific symbol rate value. To enter the symbol rate value, use the number keys.

**Manual installation**
Analogue TV channels can be manually installed, channel by channel.

To install analogue channels manually, press ⌂, select ⚙ **Setup** and press **OK**.
Select **Channel settings** and press **OK**.
Select **Channel installation** > **Analogue : manual installation** and press **OK**.

**1 - System**
To set up the TV system, select **System** and press **OK**.
Select your country or the part of the world where you are now.
**2 - Find channel**
To find a channel, select **Find channel** and press **OK**. Select **Search** and press **OK**. You can also enter a frequency yourself.
If the reception is poor, press **Search** again. If you want to store the channel, select **Done** and press **OK**.
**3 - Fine tune**
To fine tune a channel, select **Fine tune** and press **OK**. You can fine tune the channel with ▲ or ▼.
If you want to store the channel found, select **Done** and press **OK**.
**4 - Store**
You can store the channel on the current channel number or as a new channel number.
Select **Store current channel** or **Store as new channel**.

You can redo these steps until you found all available analogue TV channels.

## Picture format

If black bars appear on top and bottom or on both sides of the picture, you can adjust the picture format to a format that fills the screen.

While watching a TV channel, press ⛶ **FORMAT** to open the **Picture format** menu.
Select a format from the list and press **OK**.

**Picture formats**
The following formats are available according to the picture on screen:

• **Auto fill**
Automatically enlarges the picture to fill the screen. Picture distortion is minimal, subtitles remain visible. Not suitable for PC input. Some extreme picture formats can still show black bars.

• **Auto zoom**
Automatically zooms in the picture to fill the screen as much as possible without distortion. Black bars may be visible. Not suitable for PC input.

• **Super zoom**
Removes the black bars on the side of 4:3 broadcasts. The picture is adjusted to fit the screen.

• **Movie expand 16:9**
Scales the picture to a 16:9 format.

• **Wide screen**
Stretches the picture to a 16:9 format.

• **Unscaled**
Expert mode for HD or PC input. Pixel for pixel display. Black bars may appear with pictures from a computer.

## Text

**Text pages**
**Open Text**
To open Text while you are watching TV channels, press **TEXT**.
To close Text, press **TEXT** again.

### Select a Text page
To select a page …
• Enter the page number with the number keys.
• Press ◄ or ►
• Press ▲ or ▼.
• Press a colour key to select a colour-coded subject at the bottom of the screen.

### Text sub-pages
A Text page number can hold several subpages. The subpage numbers are shown on a bar next to the main page number.
To select a subpage, press ◄ or ►.

### T.O.P. Text pages
Some broadcasters offer T.O.P. Text.
To open T.O.P. Text pages within Text, press **OPTIONS** and select **T.O.P. overview**.

### Search Text
You can select a word and scan Text for all occurrences of this word.
Open a Text page and press **OK**.
Select a word or number with the arrow keys.
Now press **OK** again to jump immediately to the next occurrence of this word or number.
Press **OK** again to jump to the subsequent occurrence.
To stop the search, press ▲ until nothing is selected.

### Text from a connected device
Some connected devices that receive TV channels can also offer Text.
To open Text from a connected device, press **⌂**, select the device and press **OK**.
While watching a channel on the device, press **OPTIONS**, select Show device keys and select the ▤ key and press **OK**.
Press ⮌ to hide the device keys.
To close Text, press ⮌ again.

### Digital Text (UK only)
Some digital TV broadcasters offer dedicated Digital Text or interactive TV on their digital TV channels. This includes normal Text using the number, colour and arrow keys to select and navigate.
To close Digital Text, press ⮌.

### Text options
In Text, press **OPTIONS** to select the following:
• Freeze page
• Dual screen
• T.O.P. overview
• Enlarge
• Reveal
• Cycle subpages
• Language

### Freeze page
To stop the automatic rotation of subpages, press **OPTIONS** and select **Freeze page**.

### Dual screen / Full screen
To show the TV channel and Text alongside each other, press **OPTIONS** and select **Dual screen**.
Select **Full screen** to switch back to full screen view.

### T.O.P. overview
To open T.O.P. Text, press **OPTIONS** and select **T.O.P. overview**.

### Enlarge
To enlarge the Text page for more comfortable reading, press **OPTIONS** and select **Enlarge**. To scroll down the page, press ▼ or ▲.

### Reveal
To unhide hidden information on a page, press **OPTIONS** and select **Reveal**.

### Cycle subpages
To cycle subpages when these are available, press **OPTIONS** and select **Cycle subpages**.

### Language
To switch the group of characters that Text uses to display correctly, press **OPTIONS** and select **Language**.

### Text setup
### Text language
Some digital TV broadcasters have several Text languages available.
To set your primary and secondary Text language, press **⌂**, select **⚙ Setup** and press **OK**.
Select **Channel settings** and select **Primary** or **Secondary Text** and select your preferred Text languages.

### Text 2.5
If available, Text 2.5 offers more colours and better graphics. Text 2.5 is activated as a standard factory setting.
To switch it off, press **⌂**, select **⚙ Setup** and press **OK**.
Select **TV settings** > **Preferences** > **Text 2.5.**

---

## Interactive TV

### What is iTV?
With interactive TV, some digital broadcasters combine their normal TV programme with information or entertainment pages. On some pages, you can respond to a programme or vote, do online shopping or pay for a video-on-demand programme.

### HbbTV, MHEG, . . .
Broadcasters use various interactive TV systems : HbbTV (Hybrid Broadcast Broadband TV) or iTV (Interactive TV - MHEG). Interactive TV is sometimes referred to as Digital Text or Red button. But each system is distinct.
Visit the broadcasters Internet website for more information.

### What you need
Interactive TV is only available on digital TV channels. To enjoy the full benefits of Interactive TV, you need a high-speed (broadband) Internet connection to the TV.

### iTV pages

#### Open iTV pages

Most channels that offer HbbTV or iTV invite you to press the (red) key or **OK** key to open their interactive programme.

#### Navigate iTV pages

You can use the arrow and colour keys, the number keys and the ⮌ key to navigate the iTV pages. You can use the ▶ (Play), ❚❚ (Pause) and ■ (Stop) keys to watch videos within iTV pages.

#### Digital Text (UK only)

To open Digital Text, press **TEXT**. To close, press ⮌.

#### Close iTV pages

Most iTV pages inform you which key to use to close.
To force an iTV page to close, switch to the next TV channel and switch back.

3.4

# TV guide

## Open TV Guide

With the TV guide you can view a list of the current and scheduled TV programmes of your channels*.

#### Open TV guide

To open the TV guide, press **GUIDE**.
Press **GUIDE** again to close.

The first time you open the TV guide, the TV scans all TV channels for programme information. This may take several minutes. TV guide data is stored in the TV.

#### Switch to a programme

From the TV guide, you can switch to a current programme.
To select a programme, use the arrow keys to highlight the programme name.
Navigate to the right to view programmes scheduled later that day.
To switch to the programme (channel), select the programme and press **OK**.

#### View programme details

To call up the details of the selected programme, press **INFO**.

#### Change day

The TV guide can show scheduled programmes for the upcoming days (maximum up to 8 days).
To view the schedule of one of the next days, press **CH+**.
Press **CH-** to go back to the previous day.
Alternatively, you can press **OPTIONS** and select **Change day**.
Select **Previous day**, **Today** or **Next day** and press **OK**, to select the day of the schedule.
If the TV guide information comes from the Internet, press **Select day**.

#### Set a reminder

If the TV guide data comes from the broadcaster, you can set reminders that alert you of the start of a programme with a message on screen.
To set a reminder, select the programme in the schedule and press the colour key of **Set reminder**. The programme is marked with a clock.
To cancel the reminder, press the colour key of **Clear reminder**.

To view a list of all reminders you have set, press the colour key of **Scheduled reminders**.

#### Search by genre

If the information is available, you can look up scheduled programmes by genre like movies, sports, etc.
To search for programmes by genre, press **OPTIONS** and select **Search by genre**.
Select a genre and press **OK**. A list with the found programmes appears.

#### Recording

If you connect a USB Hard Drive to the TV, you can make a recording.
Use the TV guide to make a scheduled recording.
In **Help**, press **List** and look up **Recording** for more information.

* Depending on where the TV guide information (data) is coming from, analogue and digital channels or only digital channels are shown. Not all channels offer TV guide information.

## Receiving TV guide info

The TV guide receives information (data) from broadcasters or from the Internet. In some regions and for some channels, TV guide information might not be available.

As long as you did not connect the TV to the Internet, the information comes from the broadcaster.
The moment the TV is connected to the Internet, the TV switches to information from the Internet.

If TV guide information comes from the Internet, the TV guide can also list analogue channels next to the digital channels. In the TV guide menu, you can view the current channel you are watching in a small screen. With the TV guide from the Internet, you cannot set reminders.

#### Set the TV guide information

If the TV is connected to the Internet, you can set the TV to receive the TV guide information from the broadcaster.
To set the TV guide information, press **Home**, select **Setup** and press **OK**.
Select **TV settings** > **General settings** > **TV guide**.

Select **From the broadcaster** or **From the Internet**.

3.5
# Switch to devices

## Source list

In the list of connections - the Source menu - you can find the devices connected to the TV.
From this Source menu, you can switch to a device.

### Source menu
To open the Source menu, press **SOURCE**.
To switch to a connected device, select the device with the arrows ◄ (left) or ► (right) and press **OK**.
For some devices (HDMI-CEC devices), you can select an activity directly in the list underneath the device icon.
Select the device and select an activity and press **OK**.
To close the Source menu without switching to a device, press again.

### Automatic detection
When you connect a new device to the TV, the device is detected automatically and put in the Source menu. The device is shown as an icon (the device type) and has a name. If the device type does not correspond with the device, e.g. the TV says it is a player but it is not, you can change the type.
To change the type of the device, press **Device type** and select a type that fits the device and press **OK**.
If the name does not fit the device or you want to give the device a name of your own, press **Rename**. Use the remote control keypad to enter a new name.

An appropriate device type helps you in using the device. The device type determines picture and sound styles, resolution values, specific settings or the position within the Source menu.

When you connect a new device to the TV, the icon of the device jumps to the front of the Source menu.

If the TV does not detect the device automatically, select the connection where you connected the device and adjust the Device type and name.

### Original name and icon
To restore the device icon to its original name and type icon, press **OPTIONS**, select the **Options** tab in the menu bar and select **Original name and icon** and press **OK**.

### Scan connections
To rescan all TV connections and update the Source menu, press **OPTIONS**, select the **Options** tab in the menu bar, select **Scan connections** and press **OK**.

## From standby

With the TV in standby, you can switch on a connected device with your TV remote control.

### Play
To switch on both disc player and TV from standby and start playing the disc or programme immediately, press ► (play) on the TV remote control.
The device should be connected with an HDMI cable and both TV and device must have HDMI CEC switched on.

### Home Theatre System
You can switch on your Home Theatre System to listen to an audio disc or a radio channel and leave the TV in standby.
To only switch on the HTS, with the TV in standby, press **SOURCE** on the TV remote control.

## EasyLink

With **EasyLink** you can operate a connected device with the TV remote control. EasyLink uses HDMI CEC to communicate with the connected devices. Devices must support HDMI CEC and must be connected with an HDMI connection.

In **Help**, press **List** and look up **EasyLink** for more information.

3.6
# Subtitles and languages

## Subtitles

### Switch subtitles on
To open the Subtitle menu, press **SUBTITLE**.
You can switch subtitles**On** or **Off**.
To show subtitles when the broadcasted programme is not in your language - the language you set for the TV, select **Automatic**. Also, this setting will show subtitles when you mute the sound with .

For analogue channels, subtitles must be made available in **Text**.

**Subtitles for analogue channels**
For analogue channels, you need to make subtitles available for each channel manually.
**1 -** Switch to a channel and press **Text** to open Text.
**2 -** Enter the page number for subtitles, usually 888.
**3 -** Press **Text** again to close Text.
If you select On in the Subtitle menu when watching this analogue channel, subtitles will be shown if available.
To know if a channel is analogue or digital, switch to the channel and open **Status** in the **Options** menu.

**Subtitles for digital channels**
There is no need to set subtitles in Text for digital channels. Digital channels can offer several subtitle languages for a programme. You can set a preferred primary and secondary subtitle language. If subtitles in one of these languages are available, the TV will show them.
If none of the preferred subtitle languages are available, you can select another subtitle language which is available.

To set the primary and secondary subtitle language . . .
**1 -** Press ⌂, select **Setup** and press **OK**.
**2 -** Select **Channel settings** and select **Languages** > **Primary subtitles** or **Secondary subtitles** and press **OK**.
**3 -** Select a language and press **OK**.
**4 -** Press ⮌, repeatedly if necessary, to close the menu.

To select a subtitle language when none of your preferred languages is available . . .
**1 -** Press **OPTIONS**
**2 -** Select **Subtitle language** and select a language you want temporarily and press **OK**.

## Audio language

Digital TV channels can broadcast audio with several spoken languages for a programme. You can set a preferred primary and secondary audio language. If audio in one of these languages is available, the TV will switch to this audio.
If none of the preferred audio languages is available, you can select another audio language which is available.

To set the primary and secondary audio language . . .
**1 -** Press ⌂, select **Setup** and press **OK**.
**2 -** Select **Channel settings** and select **Languages** > **Primary audio** or **Secondary audio** and press **OK**.
**3 -** Select a language and press **OK**.
**4 -** Press ⮌, repeatedly if necessary, to close the menu.

To select an audio language when none of your preferred audio language is available . . .
**1 -** Press **OPTIONS**
**2 -** Select **Audio language** and select an audio language you want temporarily and press **OK**.

**Original language**
If the digital channel holds the original language of a programme or movie, you can set the TV to automatically switch to that audio language. Set Original language to On to watch a dubbed movie in its original language (if the original language is available).
To set **Original language** . . .
**1 -** Press ⌂, select **Setup** and press **OK**.
**2 -** Select **Channel settings** and select **Languages** > **Original language** and press **OK**.
**3 -** Select **On** or **Off** and press **OK**.
**4 -** Press ⮌, repeatedly if necessary, to close the menu.

**Audio languages for the hearing and visually impaired**
Some digital TV channels broadcast special audio and subtitles adapted for people who are hearing or visually impaired.
In **Help**, press ☰ **List** and look up **Universal access** for more information.

## Menu language

To change the language of the TV menus and messages . . .
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **General settings** > **Menu language** and press **OK**.
**3 -** Select the language you want and press **OK**.
**4 -** Press ⮌, repeatedly if necessary, to close the menu.

3.7
# Timers and clock

## Sleeptimer

With the sleep timer, you can set the TV to switch to standby automatically after a specified time.

To set the sleep timer, press ⌂, select ⚙ **Setup** and press **OK**.
Select **TV settings** > **General settings** > **Sleep timer**. With the slider bar you can set the time up to 180 minutes in increments of 5 minutes. If set to 0 minutes, the sleep timer is switched off.

You can always switch off your TV earlier or reset the time during the countdown.

## Clock

To know what time it is, press **GUIDE** to find the time in the TV guide.

In some countries, digital broadcasts do not send UTC - Coordinated Universal Time information. The daylight saving change might be ignored and the TV might show an incorrect time.

To correct the TV clock, press ⌂, select ⚙ **Setup** and press **OK**.
Select **TV settings** > **General settings** > **Clock** and select **Country dependent**.
Select **Daylight saving** and select the appropriate setting.
To set the time and date manually, select **Manual**. Then select **Time** or **Date**.

When you record programmes with **Smart TV**, **Recording**, we recommend not to change the time and date manually.

## Switch off timer

If you do not press a key on the remote control during a 4 hour period, or if the TV receives no input signal and receives no remote control commands for 10 minutes, the TV switches off automatically to save energy.

If you use the TV as a monitor or use a digital receiver to watch TV (a Set-top box - STB) and you do not use the remote control of the TV, you should deactivate the automatic switch off.

To deactivate, press ⌂, select ⚙ **Setup** and press **OK**.
Select **TV settings** > **General settings** > **Switch off timer** and set the slider bar to **0**.

In **Help**, press ☰ **List** and look up **Saving energy** for more information on environmentally friendly TV settings.

3.8
# Picture settings

## Picture settings

In the Picture menu, you can adjust all picture settings individually.

To open the Picture settings, press ⌂, select ⚙**Setup** and press **OK**.
Select **TV settings** > **Picture**.

• **Picture style**
In **Help**, press ☰ **List** and look up **Picture style** for adjusting the picture style settings.
• **(3D) Backlight**
Sets the contrast level of the backlight.
• **Colour**
Sets the level of colour saturation.
• **Sharpness**
Sets the level of sharpness of fine detail.
• **Noise reduction**
Filters out and reduces the image noise in the picture.
• **MPEG artefact reduction**
Smoothens the digital transitions in the picture.
• **Pixel Precise HD**
Controls the advanced settings of the Perfect Pixel HD Engine.
— **Perfect Natural Motion** removes motion judder and reproduces smooth movement, especially in movies.
— **Clear LCD** gives a superior motion sharpness, better black level, high contrast with a flicker-free, quiet image and a larger viewing angle.
— **Super resolution** enables superior sharpness, especially on lines and contours in the picture.
— **Advanced sharpness** enables superior sharpness, especially on details in the picture.
— **Perfect contrast** sets the level at which the TV automatically enhances the details in the dark, middle and light areas of the picture.
— **Dynamic backlight** sets the level at which power consumption can be reduced by dimming the intensity of the screen. Choose for the best power consumption or for the picture with the best intensity.
— **Colour enhancement** makes the colours more vivid and improves the resolution of details in bright colours.
• **Advanced** adjusts advanced picture settings:
— **Light sensor** adjusts the picture and Ambilight settings automatically to the lighting conditions of the room.
— **Gamma** is a non-linear setting for picture luminance and contrast. Use the slider bar to set a higher or lower gamma value.
— **Colour temperature** sets the colours to **Normal**, **Warm** (reddish) or **Cool** (bluish).
— **Custom colour temperature** sets the colour temperature of the picture.
— **(3D) Video contrast** sets the contrast of the picture content.
— **Brightness** sets the brightness level of the picture.
• **Game or computer**
Sets the TV to the ideal pre-defined setting if a computer or game has been connected.
• **Format and edges**
— **Picture format**: look up and read **Picture format** with ☰ **List**.
— **Screen edges** to slightly enlarge the picture to hide distorted edges.
— **Picture shift** to move the picture up / down or left / right with the cursor keys.

## Picture style

For easy picture adjustment, you can select a preset setting with **Picture style**.
While watching a TV channel, press **OPTIONS** to open the Options menu and select **Picture style**. Select a Picture style and press **OK**.

**Picture styles**
With Picture styles, you can easily switch to the ideal picture settings for watching movies or saving energy.

Additionally, you can adjust a specific setting of a chosen Picture style, like Brightness or Contrast. The TV remembers the adjustments you made.

**Adjust a Picture style**
To adjust a Picture style . . .
**1 -** Select the style and press **OK**.
**2 -** Press ⌂, select ⚙**Setup** and press **OK**.
**3 -** Select **TV settings**, navigate to the individual setting and adjust it.
**4 -** Press ↩ to close the menu to store your setting.

To return to the original Picture style values . . .
**1 -** Press ⌂, select ⚙**Setup** and press **OK**.
**2 -** Select **TV settings** > **Picture** > **Picture style** and select the style you want to reset.
**3 -** Press **Reset**. The style is reset.

In **Help**, press ☰ **List** and look up **Picture** for adjusting separate picture settings.

The available Picture styles are . . .
• **Personal** - Your choices made in Personalise picture and sound
• **Vivid** - Ideal for daylight viewing
• **Natural** - Natural picture settings
• **Movie** - Ideal for watching movies
• **Energy saving** - Energy-conscious settings
• **Standard** - Factory standard settings
• **Photo** - Ideal for viewing photos
• **ISF Day and ISF Night** - ISF Calibration settings

**Shop or Home location**
If the Picture style is switched back to **Vivid** every time you switch on the TV, the TV location is set to **Shop**. A setting for in store promotion.
To set the TV for Home use . . .
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **General settings** > **Location** and press **OK**.
**3 -** Select **Home** and press **OK**.
**4 -** Press ↩, repeatedly if necessary, to close the menu.

## Location

**Location**
If the TV is located in a shop, you can set the TV to display an in store promotion banner. The **Picture style** is set to **Vivid** automatically. The automatic **Switch off timer** is switched off.

To set the TV to Shop location . . .
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **General settings** > **Location** and press **OK**.
**3 -** Select **Shop** and press **OK**.
**4 -** Press ↩, repeatedly if necessary, to close the menu.

3.9
# Sound settings

## Sound

In the Sound menu, you can adjust all sound settings individually.

To open Sound settings, press ⌂, select ⚙ **Setup** and press **OK**.
Select **TV settings** > **Sound**.

• **Bass**
Sets the level of low tones in the sound.
• **Treble**
Sets the level of high tones in the sound.
• **Balance**
Sets the balance of the left and right speakers to best fit your listening position.
• **Surround mode**
Sets the surround sound effect from internal speakers.
• **Headphones volume**
Sets the volume for the headphone connection of the TV.
• **Auto volume levelling**
Reduces sudden volume differences like at the beginning of adverts or when switching from one channel to another.

**Preferred audio format**
You can set the audio format to Standard (Stereo) or Advanced (Multichannel). If one of the two types are available, the TV will switch automatically to the type you set.
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **Channel settings** > **Languages** > **Preferred audio format** and press **OK**.
**3 -** Select **Standard** or **Advanced** and press **OK**.
**4 -** Press ↩, repeatedly if necessary, to close the menu.

**Mono / Stereo**
You can set the TV to mono sound.
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **Channel settings** > **Mono / Stereo** and press **OK**.
**3 -** Select **Mono** or **Stereo** and press **OK**.
**4 -** Press ↩, repeatedly if necessary, to close the menu.

## Sound style

For easy sound adjustment, you can select a preset setting with **Sound style**.
While watching a TV channel, press **OPTIONS** to open the Options menu and select **Sound style**. Select a Sound style and press **OK**.

**Sound styles**
With Sound styles, you can switch easily to ideal settings for speech (News) or watching movies.
Additionally, you can adjust a specific setting of a chosen Sound style, like Bass or Treble. The TV remembers the adjustments you made.

**Adjust a Sound style**

To adjust a Sound style . . .
**1 -** Select the style and press **OK**.
**2 -** Press ⌂, select ⚙**Setup** and press **OK**.
**3 -** Select **TV settings**, navigate to the individual setting and adjust it.
**4 -** Press ↩ to close the menu to store your setting.

To return to the original Sound style values . . .
**1 -** Press ⌂, select ⚙**Setup** and press **OK**.
**2 -** Select **TV settings** > **Sound** > **Sound style** and select the style you want to reset.
**3 -** Press ■**Reset**. The style is reset.

In **Help**, press ☰ **List** and look up **Sound** for adjusting separate sound settings.

The different Sound styles are . . .
• **Personal** - Your personal choices made in Personalise picture and sound
• **Original** - Factory standard
• **News** - Ideal for speech
• **Movie** - Ideal for watching movies
• **Game** - Ideal for gaming
• **Music** - Ideal for listening to music

## TV placement

**TV placement**
As part of the first installation, this setting is set to either **On a TV stand** or **Wall mounted**.
If you have changed the placement of the TV since then, adjust this setting accordingly for best sound reproduction.
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **General settings** > **TV placement** and press **OK**.
**3 -** Select **On a TV stand** or **Wall mounted** and press **OK**.
**4 -** Press ↩, repeatedly if necessary, to close the menu.

3.10
# Ambilight settings

## Switch Ambilight on and off

To get the best Ambilight effect, keep in mind these tips :
• Dim the lighting conditions in the room and position the TV up to 25 cm away from the wall.
• Adjust Ambilight according to the colour of your wall at home in the Wall colour setting.
• Infrared remote control signals can be disturbed by Ambilight. Position your devices (disc player or Home theatre system) away from Ambilight.

Press **AMBILIGHT** on the remote control to switch Ambilight on or off and to toggle between the Ambilight settings **Off**, **Dynamic** and **Static**.
Look up and read **Ambilight dynamic** and **Ambilight static** with ☰**List**, if you want to know more about these Ambilight settings.

You can also switch Ambilight on or off with the Ambilight menu.
Press ⌂, select ⚙**Setup** and press **OK**.
Select **TV settings** and press **OK**. Select **Ambilight**.

## Ambilight dynamic

With **Ambilight dynamic** you can adjust the speed at which Ambilight responds to onscreen images.
Press ⌂, select ⚙**Setup** and press **OK**.
Select **TV settings** and press **OK**. Select **Ambilight** > **Mode** > **Dynamic** and press **OK**.
Select **Dynamic**. Use the slider bar to adapt the speed to your preference.

With **Ambilight static** you can set an Ambilight colour of your own.
Press ⌂, select ⚙**Setup** and press **OK**.
Select **TV settings** and press **OK**.
Select **Ambilight** > **Mode** > **Static** and press **OK**.
Select **Static**. Choose your preferred colour. The Ambilight static colours are fixed (non-dynamic) colours.

## Ambilight settings

More Ambilight settings are available in the Ambilight menu in TV settings.
To change these settings, press ⌂, select ⚙**Setup** and press **OK**.
Select **TV settings** > **Ambilight**.

**Ambilight mode**
When the TV is on, you can toggle with the **AMBILIGHT** key between the Ambilight modes**Off**, **Dynamic** and **Static**. Select **Dynamic**, if Ambilight should respond to onscreen images.
Select **Static** if you want to set a specific fixed colour.

**Ambilight brightness**
To set the Ambilight brightness, select **Brightness** and press **OK**. Adjust the light output of Ambilight.

**Ambilight dynamic**
To adjust the speed at which Ambilight responds to onscreen images, select **Dynamic**.
In **Help**, press ☰ **List** and look up **Ambilight dynamic** for more information.

**Ambilight static**
To set an Ambilight colour of your own. The Ambilight static colours are fixed (non-dynamic) colours.
In **Help**, press ☰ **List** and look up **Ambilight static** for more information.

**Wall colour**
The colour of the wall behind your TV can influence the colour effect of Ambilight.
To correct this influence, select **Ambilight** > **Advanced** > **Wall colour** and select a colour that matches the wall colour. Ambilight will correct its colours to mix best with the colour of the wall behind the TV.

**TV switch off**
To set Ambilight to switch off immediately or to fade out and switch off a few seconds after you have switched off the TV, select **Ambilight** > **Advanced** > **TV switch off**.

**Lounge light mood**
In **Help**, press ☰ **List** and look up **Lounge light** for more information.

## Lounge light

When the TV is on standby, you can switch Ambilight on and create a Lounge light effect in your room.

To switch Ambilight on while the TV is on standby, press **AMBILIGHT**.

To change the Lounge light colour scheme, press **AMBILIGHT** again.

To switch off Lounge light, press and hold **AMBILIGHT** for a few seconds.

You can also set up the colour scheme in the TV settings menu.
With the TV switched on, press ⌂, select ⚙**Setup** and press **OK**.
Select **TV settings** > **Ambilight** > **Advanced** > **Lounge light mood**. Select the colour scheme with which Lounge light will start up.

3.11
# Universal access

## Switch on

With Universal access switched on, the TV is set for use for hearing and visually impaired people.

**Switch on**
If you did not switch on Universal access during the installation, you can still switch it on in Setup.
To switch on Universal access, press ⌂, select ⚙**Setup** and press **OK**.
Select **TV settings** > **General settings** > **Universal access**.
Select **On** and press **OK**.

With Universal access switched on in Setup, the Universal access option is added in the Options menu. With Universal menu in the Options menu, you can set specific settings for hearing and visually impaired people.

## Hearing impaired

Some digital TV channels broadcast special audio and subtitles adapted for hearing impaired people. With Hearing impaired switched on, the TV automatically switches to the adapted audio and subtitles, if available.

**Switch on**
To switch on Hearing impaired, press ⫶⫶**OPTIONS**, select **Universal access** and press **OK**.
Select **Hearing impaired**, select **On** and press **OK**.

To check whether a hearing impaired audio language is available, press ⫶⫶**OPTIONS**, select **Audio language** and look for an audio language marked with a 🦻.

If Universal access does not appear in the Options menu, switch on **Universal access** in Setup.
In **Help**, press ☰ **List** and look up **Universal access** for more information.

## Visually impaired

Digital TV channels can broadcast special audio commentary describing what is happening on screen. To be able to set the Visually impaired settings, Universal access must be switched on.

**Visually impaired**
With **Visually impaired**, a narrator's commentary is added to the normal audio.
To switch on the commentary (if available) . . .
**1 -** With **Universal access** switched on, press ⫶⫶ **OPTIONS** and select the **Options** tab in the menu bar.
**2 -** Select **Visually impaired** and press **OK**.
**3 -** Select **On** and press **OK**.

You can check if a visually impaired audio commentary is available.
In the Options menu, select **Audio language** and look for an audio language marked with a .

**Speakers / Headphones**
You can select where you want to hear the audio commentary. On the TV speakers only, on the headphones only or on both.
To set **Speakers / Headphones** . . .
**1 -** Press , select **Setup** and press **OK**.
**2 -** Select **Channel settings** > **Languages** > **Visually impaired** > **Speakers / Headphones** and press **OK**.
**3 -** Select **Speakers**, **Headphones** or **Speakers + headphones** and press **OK**.
**4 -** Press , repeatedly if necessary, to close the menu.

**Mixed volume**
You can mix the volume of the normal audio with the audio commentary.
To mix the volume . . .
**1 -** Press **OPTIONS** and select the **Options** tab in the menu bar.
**2 -** Select **Mixed volume** and press **OK**.
**3 -** Use the arrows up and down to set the slider bar.
**4 -** Press **OK** to confirm.

**Audio effect**
Some audio commentary can hold extra audio effects, like stereo or fading sound.
To switch on **Audio effects** (if available) . . .
**1 -** Press , select **Setup** and press **OK**.
**2 -** Select **Channel settings** > **Languages** > **Visually impaired** > **Audio effects** and press **OK**.
**3 -** Select **On** or **Off** and press **OK**.
**4 -** Press , repeatedly if necessary, to close the menu.

**Speech**
For speech, the audio commentary can also hold subtitles for the words which are spoken.
To switch on these subtitles (if available) . . .
**1 -** Press , select **Setup** and press **OK**.
**2 -** Select **Channel settings** > **Languages** > **Visually impaired** > **Speech** and press **OK**.
**3 -** Select **Descriptive** (audio) or **Subtitles** and press **OK**.
**4 -** Press , repeatedly if necessary, to close the menu.

---

## Key beep

**Key beep** gives an audio feedback each time you press a key on the remote control. The volume of the beep is fixed.

**Switch on**
To switch on Key beep, press **OPTIONS**, select **Universal access** and press **OK**.
Select **Key beep** and select **On**.

If Universal access does not appear in the Options menu, switch on Universal access in Setup.
In **Help**, press **List** and look up **Universal access** for more information.

4

# 3D

## 4.1 What you need

This is an Easy 3D TV.

To watch 3D you need to :
• tune to a TV channel that broadcasts programmes in 3D
• rent a movie in 3D from an online video store with Smart TV
• watch a movie in 3D from a 3D Blu-ray Disc, a USB device or computer

Four pairs of passive 3D glasses are included.
For an extra pair of glasses order the Philips Passive 3D glasses PTA417 or PTA426 (sold separately). Other 3D glasses might not be supported.

## 4.2 Your 3D glasses

**Passieve 3D glasses PTA417**
To watch a 3D picture on TV, simply put on the 3D glasses.

**Recommended viewing height**
For best picture quality, when watching passieve 3D, your eyes should be level with the centre of the screen.

## 4.3 Watch 3D

**3D switching**
The first time a 3D signal is detected, you can set your preference how to start 3D in the future.
To switch to 3D automatically, select **Automatic**.
To show a notification first, select **Notify**.
To never switch to 3D, select **No 3D**.

You can still change this preference in the 3D menu later.
To open the 3D menu, press **3D** and select **Switch to 3D** to set your preference.

**Start 3D**

When the TV switches to 3D or when a notification is shown that 3D is available, switch on your active 3D glasses and put them on.

If the TV cannot detect the 3D signal (the 3D signal tag is missing), the 3D programme is shown as a double image on screen. To switch to 3D, press **3D** and select **Side by side** or **Top / bottom** according to the double image positions.

**Stop 3D**
To stop watching 3D, press **OPTIONS**, select **3D depth** and select **Off**.
3D is switched to 2D when you switch to another channel or connected device.

**2D to 3D conversion**
You can convert any 2D programme to watch it in 3D.
To convert a 2D programme to 3D, press **3D**, select **2D to 3D conversion** and confirm with **OK**.
To stop the 2D to 3D conversion, press **OPTIONS**, select **3D depth** and select **Off** or switch to another activity in the Home menu. The conversion will not stop if you switch between TV channels.

**3D depth**
You can change the depth of 3D for a weaker or stronger 3D effect.
To change the 3D depth, press **OPTIONS** and select **3D depth**. Select **Off** (no 3D), **Less** (less 3D depth), **Normal** (optimal 3D quality) or **More** (more 3D depth).

**3D experience**
With 3D experience you can adapt flicker on the screen in order to increase the ease of viewing 3D content. To change the flicker reduction, press **OPTIONS**, select **3D experience** and select **Maximum clarity** (more 3D effect, more flicker) or **Flicker free** (less flicker, less tiring).

## 4.4 Optimal 3D viewing

For an optimal 3D viewing experience, we recommend that you:
• sit at least 3 times the height of the TV screen away from the TV, but no further than 6 meters away.
• avoid fluorescent lighting (such as TL lighting or certain energy saving light bulbs which operate on a low frequency) and direct sunlight as they may interfere with the 3D experience.

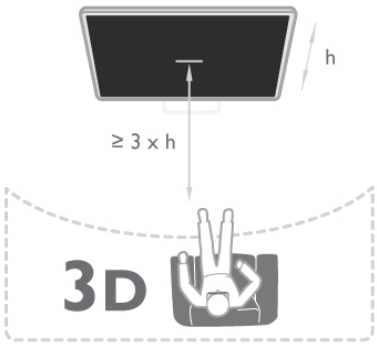

4.5
# Health warning

• If you or your family have a history of epilepsy or photosensitive seizures, consult a medical professional before exposing yourself to flashing light sources, rapid image sequences or 3D viewing.
• To avoid discomfort such as dizziness, headache or disorientation, we recommend not watching 3D for extended periods of time.

**If you experience any discomfort, stop watching 3D and do not immediately engage in any potentially hazardous activity (for example driving a car) until your symptoms have disappeared. If symptoms persist, do not resume watching 3D without consulting a medical professional first.**

• Parents should monitor their children during 3D viewing and ensure they do not experience any discomfort as mentioned above. Watching 3D is not recommended for children under 6 years of age as their visual system is not fully developed yet.
• Do not use the 3D glasses for any purpose other than watching 3D TV.

4.6
# Care of the 3D glasses

• Do not expose the 3D glasses to direct sunlight, heat, fire or water. This may result in a product malfunction or fire.
• Use a clean soft cloth (microfiber or cotton flannel) to clean the lenses to avoid scratching them. Never spray cleaner directly onto the 3D glasses. This may damage the electronics.
• Do not drop, bend or apply force to the lenses of the 3D glasses.
• Do not use cleaning chemicals containing alcohol, solvent, surfactant, or wax, benzene, thinner, mosquito repellent or lubricant. Using these chemicals can cause discoloration or cracks.

5
# Smart TV

5.1
## Home menu

From the Home menu, you can start any activity you can do with the TV.

Open the Home menu to start watching TV or start watching a disc on your Home Theatre System. Also in the Home menu, you can open Smart TV to surf the Internet, start Skype or open Help if you need information on using the TV.

**Open the Home menu**
To open the Home menu, press ⌂.
Select an activity using the arrow keys and press **OK** to start the activity.
To close the Home menu without changing the current activity, press ⌂ again.

- **TV**
Select **TV** and press **OK** to watch TV channels.

- **Satellite**
Select **Satellite** and press **OK** to watch satellite channels (only for TVs with a built-in satellite tuner).

- **Smart TV**
Select **Smart TV** and press **OK** to open the Smart TV start page.

- **Source**
Select **Source** and select a connected device in the list underneath the icon. Press **OK** to switch to the selected device.

- **TV guide**
Select **TV guide** and press **OK** to open a list of the current and scheduled TV programmes of your channels.

- **Recordings**
Select **Recordings** and press **OK** to open the list of your recordings (only available if you connect a USB Hard Drive).

- **Skype**
Select **Skype** to make video calls for free.

- **Setup**
Select **Setup** to install channels or adjust all TV settings.

- **Help**
Select **Help** and press **OK** to open the on screen Help. You can look up a topic in an alphabetical list.

5.2
# Smart TV Apps

## What you need

To enjoy Smart TV Apps you must connect the TV to a router with a high-speed (broadband) connection to the Internet. You can use a home network connected to the Internet. You do not need a computer.
In **Help**, press ☰ **List** and look up **Network** for more information.

**Tip**
To enter text or to navigate an Internet page more easily, you can consider to connect a USB keyboard and a USB mouse to the TV. The USB mouse can only navigate pages on the Internet, it cannot navigate Smart TV App pages.
In **Help**, press ☰ **List** and look up **USB keyboard** or **USB mouse** for more information.

## Configure

The first time you open Smart TV, you need to configure your connection. Read and agree to the terms and conditions to continue. To leave Smart TV, press ⮌.

**Register**
Register with Club Philips.
Select **Register** and press **OK**.
Enter your email address, select **Continue** and press **OK**.
Confirm the email address.

**Parental control**
To lock Adult 18+ rated apps, switch on Smart TV parental control by selecting **Enable** and then press **OK**.
Enter an unlock PIN code of your choice.
Confirm your PIN code. Adult 18+ rated apps are now locked.

To open a locked app, select the app and press **OK**. The TV will ask you to enter your 4-digit code.

**Reconfigure**
To reconfigure your connection with Smart TV, clear the Internet memory on the TV.
To clear the Internet memory, press ⌂ and select ⚙ **Setup** and press **OK**.
Select **Network settings** > **Clear Internet memory** and press **OK**.

## Smart TV start page

The Smart TV start page is your link with the Internet. You can rent movies online, read newspapers, watch videos and listen to music, also shop online, open your social network page or watch TV programmes when it suits you with Online TV. To do this, you open Apps - Internet sites which are tailored for TV. With your TV connected to the Internet, you can open Smart TV.

### Open Smart TV

To open the Smart TV start page, press **Smart TV**.
Alternatively, you can press , select **Smart TV** and press **OK**.

The TV connects to the Internet and opens the Smart TV start page. This may take a few seconds.

**1 -** Now on your TV
**2 -** Your Apps
**3 -** App gallery
**4 -** Internet
**5 -** Recommended Apps
**6 -** Search
**7 -** Colour keys for control

### Your Apps

You start Apps from the Smart TV start page. If the start page does not hold any Apps yet, you can add Apps from the App gallery.
The list of your Apps can be several pages long. Use the arrow keys to go to the next or previous page. Alternatively, press **CH+** (Next page) or **CH-** (Previous page).

### App gallery

In the App gallery you find all available Apps.

### Internet

The **Internet** App opens the World Wide Web on your TV. On your TV, you can view any Internet website but most of them are not tailored for a TV screen.
- Some plug-ins (e.g. to view pages or videos) are not available on your TV.
- Internet pages are shown one page at a time and full screen.

### Recommended Apps

In this window, Philips presents a range of recommended Apps for your country, Apps for Online TV or a selection of rental movies from Video stores. You can select and open them from the Recommended Apps window.

### Search

With Search, you can search the App gallery for relevant Apps. Enter a keyword in the text field, select and press **OK** to start searching. You can enter names, titles, genres and description keywords to search.
Alternatively, you can leave the text field empty and search for the most popular searches/keywords for a range of categories. In the list of found keywords, select a keyword and press **OK** to search for items with that keyword.

In the list of Apps on the Smart TV start page you can . . .

### Remove an App

To remove an App from the Smart TV start page, select the App icon and press **Remove**.

### Move an App

To reposition an App in the list, select the App icon, press **Move** and use the arrow keys to reposition the App. Press **OK** to confirm the position.

### Lock an App

To lock an App, select the App icon and press **Lock**.
When you lock an App, you must enter the 4 digit PIN code you set for Parental control when you configured Smart TV. In the list, a locked App is marked with a lock .
To unlock an App, select the App icon and press **Unlock**.
You must enter the 4 digit PIN code to unlock.

### Feedback on an App

Select the App and press **Feedback** to select a 'like' or 'don't like' button and send a suggestion or remark to us. You can also report an App malfunction.

### Close Smart TV

To close the Smart TV start page, press and select another activity.

TP Vision Netherlands B.V. bears no responsibility regarding the content and the quality of the content provided by the content service providers.

---

## Using Apps

To start an App, you must add it to your list of Apps in the Smart TV start page first.
You can add Apps to your list from the App gallery.

### App gallery

In the App gallery you find all available Apps. The App gallery shows Apps in lists per country.
To open the App gallery, select the App gallery icon on the Smart TV start page and press **OK**.
In the App gallery, use the arrow keys to select items in the page.
To view the Apps ordered by category, press **All Apps**, select a category and press **OK**.
To view the Apps from another country, press **Country**, select a country and press **OK**.
To lock an App, select the App icon and press **Lock**.
When you lock an App, you must enter the 4 digit PIN code you set for Parental control when you configured Smart TV. In the list, a locked App is marked with a lock .
To unlock an App, select the App icon and press **Unlock**.
You must enter the 4 digit PIN code to unlock.

To return to the Smart TV start page, press ☰ **LIST** or ⮌.

**Add an App to your list**
In the App gallery, select the App icon and press **OK**.
Select **Add** and press **OK**.
Alternatively, select **Add and move** to add it and immediately position the App where you want it in your list.

**Start an App**
To start an App, press ⌂ and select **Smart TV**.
On the start page, select an App icon and press **OK**.
In an App, press ⮌ to go back 1 step or page.

**Reload an App page**
If an App page did not load properly, press ⫶⫶ **OPTIONS** and select **Reload** to reload the page.

**Zoom**
You can zoom in on an App page.
To zoom a page, press ⫶⫶ **OPTIONS** and select **Zoom page**.
Use the slider bar to set the zoom level.
Return to normal view by resetting the slider bar.

**View security info**
You can check the security level of an App page.
On an App page, press ⫶⫶ **OPTIONS** and select **Security info**. If a lock 🔓 is shown next to the loading animation on the bottom of the screen while loading a page, the transfer is secured.

**Close an App**
To close an App and return to the Smart TV start page, press **Smart TV**.

## Rental video Apps

With the video store Apps in Smart TV, you can rent your favourite movie from an online rental video store. You can pay securely with your credit card.

**Rent a movie**
**1 -** Open a Video store App in your list of Apps or select a recommended video on the Smart TV start page.
**2 -** Select a movie.
**3 -** Make the online payment.
**4 -** Download the video.
**5 -** Start watching. You can use the ▶ (Play) and ❚❚ (Pause) keys.

Most Video stores ask you to create a log in account.

**Streaming video**
With this TV, you can watch rental movies sent as a streaming video format. You can almost instantly watch the movie. When the rental video store uses video streaming, you might need a USB Hard Drive to store some video buffer. You can pause or restart a rental movie send with streaming video.
If you have a USB Hard Drive connected, you can also download rental movies from video stores that offer movie downloading only. You can pause or restart a downloaded rental movie.

Consult the video store regarding the rental duration of rental movies.

**Internet traffic**
Streaming or downloading many videos may exceed your monthly Internet traffic limit.

## Online TV

With the Online TV App on the Smart TV start page*, you can watch TV programmes you missed or watch programmes whenever it suits you best.

**Open Online TV**
To open the Online TV App, press ⌂ and select **Smart TV**.
On the start page, select the **Online TV** icon and press **OK**.
Select a programme on the page and press **OK** to start watching.
You can use the ▶ (Play) and ❚❚ (Pause) keys.

**List per broadcaster**
To view the Online TV programmes ordered by broadcaster, press ■ **All broadcasters**.
Select a broadcaster and press **OK**.

* If available in your region.

5.3
# Videos, photos and music

## From a USB or network

You can view your photos or play your music and videos from a connected USB flash drive or USB Hard Drive. If you have a computer in your home network, you can view and play your files from your computer on the TV.

**From a USB device**
With the TV switched on, plug in a USB flash drive or USB Hard Drive to one of the USB connections. The TV detects the device and lists your files.
If the list does not appear automatically, press **SOURCE**, select **Browse USB** and press **OK**.

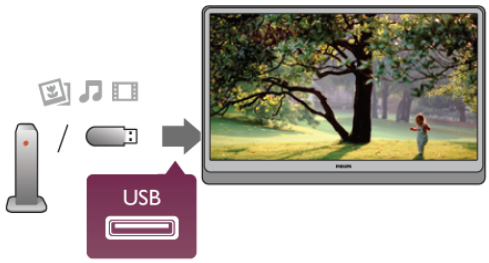


**Warning**

If you try to pause or record a programme with a USB Hard Drive connected, the TV will ask you to format the USB Hard Drive. This formatting will delete all current files on the USB Hard Drive.

**From a computer**
If the TV and the computer are in the same network, the TV can browse and play files stored on your computer. This TV uses the DLNA protocol and is compatible with other DLNA devices.
On your computer, you need to install media server software like Twonky™ to share your files with the TV. The TV shows your files and folders as they are organised on your computer.
To browse the files on your computer, press **SOURCE**, select **Browse network** and press **OK**.

## Menu bar and sorting

With a USB device connected, the TV sorts the files by type. Navigate to the menu bar and select the type of file you are looking for.
If you browse files from a computer, you can only browse the files and folders as they are organized on the computer.

**The menu bar**
Navigate to the menu bar and select the type of file you want to watch or play.
Select **Photos**, **Music** or **Videos**. Alternatively, you can open the **Folders** view and browse your folders to look for a file.

**Sorting**
To browse your photos by date, month, year or alphabetically by name, press **Sort**.
To browse your music by album, artist, genre or alphabetically by name, press **Sort**.
Videos are sorted alphabetically.

## View photos

To view photos, select **Photos** in the menu bar, select a photo thumbnail and press **OK**.
If there are several photos in the same folder, select a photo and press **Slide show** to start a slide show of all photos in this folder.
To jump to the next or previous photo, press **CH+** or **CH-**.
To stop the slide show or close the photo, press **LIST** or ■ (Stop).

You can play music with a slide show.
Start the slide show after you started the music.
**1 -** Select a song or a folder with songs and press **OK**.
**2 -** Press **LIST** and select **Photos**.
**3 -** Select a photo or a folder with photos and press **Slide show**.

**Info**
To view info on a photo (size, creation date, file path, etc.), select a photo and press **INFO**.
Press again to hide the info.

**Options**
Press **OPTIONS**.
**- Shuffle**
Shows your photos randomly.
**- Repeat**
Plays the slide show continuously.
**- Slide show speed**
Sets the speed of the slide show.
**- Slide show transition**
Sets the style of the photo transitions.

To close **Browse USB** or **Browse network**, press and select another activity.

## Play music

To play music, select **Music** in the menu bar, select a song and press **OK**.
If there are more songs in the same folder, press **Play all** to play all songs in this folder.
To jump to the next or previous song, press **CH+** or **CH-**.
To pause the music, press **OK**. Press **OK** again to continue.
To make a 10-second jump in a song or 10-second jump back, press ▶ or ◀.
To rewind or go fast forward, press ◀◀ or ▶▶. Press the keys several times to speed up - 2x, 4x, 8x, 16x, 32x.
To stop the music playback, press ■ (Stop).

If you press **LIST** or , the music keeps on playing.

**Info**
To view song info (title, artist, duration, etc.), select the song and press **INFO**.
Press again to hide the info.

**Options**
Press **OPTIONS**.
**- Shuffle**
Plays your music randomly.
**- Repeat**
Plays the song once or continuously.

**Screen off**
If you only listen to music, you can switch off the TV screen to save energy.
To switch off the screen, press **OPTIONS**, select **Eco settings** in the menu bar, select **Screen off** and press **OK**. To switch the screen back on, press any key on the remote control.

To close **Browse USB** or **Browse network**, press and select another activity.

## Play videos

To play a video, select **Videos** in the menu bar, select a video and press **OK**.
If there are more videos in the same folder, press **Play all** to play all videos in this folder.
To jump to the next or previous video, press **CH+** or **CH-**.
To pause the video, press **OK**. Press **OK** again to continue.

To make a 10-second jump forward or backward in a video, press ▶ or ◀.
To rewind or go fast forward, press ◀◀ or ▶▶. Press the keys several times to speed up - 2x, 4x, 8x, 16x, 32x.
To stop the video playback, press ■ (Stop).

**Info**
To view info on a video (playhead position, duration, title, date, etc.), select the video and press INFO.
Press again to hide the info.

**Options**
Press OPTIONS.
**- Subtitles**
If available, you can switch subtitles **On**, **Off** or **On during mute**.
**- Shuffle**
Plays your videos randomly.
**- Repeat**
Plays a video once or continuously.
**- DivX® VOD**
Opens the DivX registration.

To close **Browse USB** or **Browse network**, press and select another activity.

## DivX® VOD

This TV is DivX Certified® and plays high-quality DivX Video-On-Demand videos.

To play DivX VOD videos from a video store or from your computer, you must activate DivX VOD on the TV first. The DivX VOD activation of your TV is free of charge.

**Register**
If the TV is not yet activated when you start the playback of a rental DivX video, the TV will show you the DivX registration code to activate this TV.

To register follow these steps.

**1 -** When the TV shows the 8 or 10-digit registration code, write down the code and go to http://vod.divx.com on your computer
**2 -** Download and install the DivX player software on your computer.
**3 -** Start the DivX player software and create a DivX Account (VOD > Create a DivX Account . . .)
**4 -** In the DivX player, register the TV with the registration code of the TV (VOD > Register a DivX Certified Device . . .)
**5 -** Download and save the registration video when asked.
**6 -** Transfer the registration video to the TV. You can use a USB flash drive or your network connection.
**7 -** Play the registration video on your TV. This completes the registration and activates DivX on your TV.

Consult the DivX website for detailed support.

**Deregister**
You can deregister the TV and deactivate DivX VOD playback.
To deregister, press **SOURCE**, select **Browse USB** and press **OK**.
Press **OPTIONS**, select **DivX® VOD** and press **OK**.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation.
This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

5.4
# Pause TV

While watching a broadcast from a digital TV channel, you can pause the broadcast and continue watching later on. Answer a phone call or take a break. Meanwhile, the broadcast is buffered (not stored) on the USB Hard Drive. You can pause a broadcast for a maximum time span of 90 minutes.

**Pause a broadcast**
To pause a broadcast, press ❚❚ (Pause). A progress bar appears briefly on screen.
To call up the progress bar, press ❚❚ (Pause) again.
To continue watching, press ▶ (Play).
To switch to TV broadcast again, press ■ (Stop).

The moment you switch to a digital channel, the USB Hard Drive starts storing the broadcast. When you switch to another digital channel, broadcast of the new channel is stored and the broadcast of the former channel is cleared. When you switch to a connected device (a Blu-ray Disc player or digital receiver) the USB Hard Drive stops storing and the broadcast is cleared. Also when you switch the TV to standby the stored broadcast is cleared.
Whilst recording a programme on the USB Hard Drive, you cannot pause a broadcast.

**Instant replay**
Whilst watching a broadcast from a digital TV channel, you can easily instant replay the broadcast.
To replay the last 10 seconds of a broadcast, press ❚❚ (Pause) and press ◀ (Left).
You can press ◀ repeatedly until you reach the start of the broadcast storage or the maximum time span.

**Progress bar**

With the progress bar on screen, press ◀◀ (Rewind) or press ▶▶ (Forward) to select from where you want to start viewing the stored broadcast. Press these keys repeatedly to change their speed.

**Specifics**
The Audio Description audio (commentary) for the visually impaired is not available for playback in Pause TV or Recording.

In **Help**, press ☰ **List** and look up **USB Hard Drive, installation** to install Pause TV.

5.5
# Recording

## Record a program

If a USB Hard Drive is connected and formatted and the TV receives electronic TV guide information, you can record a digital TV broadcast.
In **Help**, press ☰ **List** and look up **USB Hard Drive, installation** to install a USB Hard Drive.

**Record now**
To record the programme you are watching, press ● (Record) on the remote control.

If you receive TV guide information from the Internet, you can adjust the end time of the recording in the pop-up window before you confirm the recording.
If you receive TV guide information from the broadcaster, the recording starts immediately. You can adjust the end time of the recording in the list of recordings. See below.
To stop recording, press ■ (Stop).

**Schedule a recording**
You can schedule a recording of an upcoming programme for today or a few days from today (maximum of 8 days away).

**1 -** To schedule a recording, press **Guide**.
On the TV guide page, select the channel and programme you wish to record.
You can enter the channel number to jump to the channel in the list.
Press ▶ (Right) or ◀ (Left) to scroll through the programmes of a channel.
To change the date of the list, press **OPTIONS** and select **Select day**. In the list, select the day you want and press **OK**. If the TV guide comes from the Internet, you can select the date at the top of the page and press **OK**.

**2 -** With the programme highlighted, press **Record** or press **OPTIONS** and select **Record**. The TV adds some time buffer at the end of the program. You can add some extra buffer if needed.

**3 -** Select **Schedule** and press **OK**. The programme is scheduled for recording. A warning will show automatically when overlapping recordings are scheduled.
If you plan to record a programme in your absence, remember to leave the TV switched to standby and the USB Hard Drive switched on.

**List of recordings**
To view the list of recordings and scheduled recordings, press ⌂, select **Recordings** and press **OK**. In this list, you can select a recording to watch, remove recorded programmes, adjust the end time of an ongoing recording or check the free disc space. Also in this list, if the TV guide comes from the Internet, you can schedule a recording of which you set the beginning and end time yourself, as a timed recording not linked to a programme. To set a timed recording, select **Schedule recording** at the top of the page and press **OK**. Set the channel, date and time span. To confirm the recording, select **Schedule** and press **OK**.

**Remove a scheduled recording**
To remove a scheduled recording, select the upcoming recording in the list and press **OK**. Alternatively, you can select the scheduled recording and press **OPTIONS** and select **Cancel recording**.

**Specifics**
- While recording a programme, you can watch a previously recorded programme.
- While recording, you cannot switch TV channels.
- While recording, you cannot pause the TV broadcast.
- To Record, broadcasters need a reliable clock setting. If you reset the TV clock manually, recordings may fail.
- The Audio Description audio (commentary) for the visually impaired cannot be recorded.

In **Help**, press ☰ **List** and look up **Watch a recording** to watch and manage your recordings.

## Watch a recording

To watch a recording, press ⌂, select **Recordings** and press **OK**.
In the list, select the recording and press ▶ (Play) to start the playback.

You can use the ▶▶ (Forward), ◀◀ (Rewind), ❚❚ (Pause) or ■ (Stop) keys on the remote control.

**Expired recording**

Broadcasters can limit the number of days a recording can be viewed. A recording in the list can show the number of days before it expires.

**Failed recording**
When a scheduled recording was prevented by the broadcaster or when the broadcast was interrupted, a recording is marked as **Failed**.

**Delete a recording**
To delete a made recording, select the recording in the list, press **OPTIONS** and select **Delete recording**.

In **Help**, press **List** and look up **Record a program** for more information.

5.6
# MyRemote App

## About MyRemote App

Download the **MyRemote app** on your smartphone or tablet. With the MyRemote app you turn your smartphone or tablet into a full remote control for your TV.

With the MyRemote app, you can also send your media - photos, music and videos - from your smartphone to the TV or from a computer to the TV. Select the files on your smartphone or tablet and enjoy the photos stored on your computer on the big TV screen or listen to music stored on your computer through the loudspeakers of your Philips Home Theatre System*.
You are in control with your mobile device.

If you have a tablet, you can call up the TV guide. You can consult the TV schedule and read programme info. You can tap the programme to switch to the TV channel directly.

**It's free**
Installing the MyRemote app on your smartphone or tablet is free of charge.

**Languages**
The following languages are available in the MyRemote App : English, German, French, Italian, Spanish, Portuguese, Dutch and Russian.
If the language set on your mobile device is not one of these languages, the MyRemote App language is switched to English.

* You can check the compatibility of MyRemote with your specific Philips product at the online support page of your product at www.philips.com/support. Also ensure your product has been upgraded with the latest software.

## What do you need

**Home network**
Your TV, smartphone, tablet and computer, must be linked up with your home network to enjoy the MyRemote app.

To connect the TV to your home network . . .
**1 -** Connect your network router to the Internet, if it was not connected yet (a broadband Internet connection).
**2 -** Connect the TV to your network router. You can do this wireless or wired.
In **Help**, press **List** and look up **Network, wireless** or **Network, wired** for more information.

**Media server software**
If you want to view your photos or play your music and videos from your computer on the TV, you have to install media server software on your computer. Setup this media server software to share your files on your home network. This TV uses the DLNA protocol and is compatible with other DLNA devices.
In **Help**, press **List** and look up **DLNA, supported media servers** for the list of media server software that is compatible with the TV.

**Digital Media Renderer - DMR**
If your media files do not play on your TV, make sure that the **Digitial Media Renderer** is switched on. As a factory setting, DMR is switched on.
To check if DMR is switched On . . .
**1 -** Press and select **Setup** and press **OK**.
**2 -** Select **Network settings** and press **OK**.
**3 -** Select **Digital Media Renderer - DMR** and press **OK**.
**4 -** Select **On** and press **OK**.
**5 -** Press , repeatedly if necessary, to close the menu.

**TV network name**
If you have more than one TV in your home network, you can rename the TV in Network settings.
To rename your TV . . .
**1 -** Press and select **Setup** and press **OK**.
**2 -** Select **Network settings** and press **OK**.
**3 -** Select **TV network name** and press **OK** to show the current name. You can use the keyboard on the remote control to change the TV network name.
**4 -** Select **Done** and press **OK** when ready.
**5 -** Press , repeatedly if necessary, to close the menu.

## Download the App

The MyRemote app is available for mobile devices running Apple iOS or Andriod.

**Apple iPhone**
To download the app on your iPhone, go to the Apple App Store and look for the **Philips MyRemote** app.

**Apple iPad**
To download the app on your iPad, go to the Apple App Store and look for the **Philips MyRemote HD** app.

**Andriod**
To download the app on your Andriod device, go to the Andriod Market and look for the **Philips MyRemote** app.

## MyRemote home menu

When you download the MyRemote app, it will appear on the home menu of your smartphone or tablet.
Tap the icon of MyRemote to start.

In the MyRemote home menu you can find the following functions . . .
- SimplyShare
- Net TV
- Control

If you have a tablet, you also find . . .
- TV guide

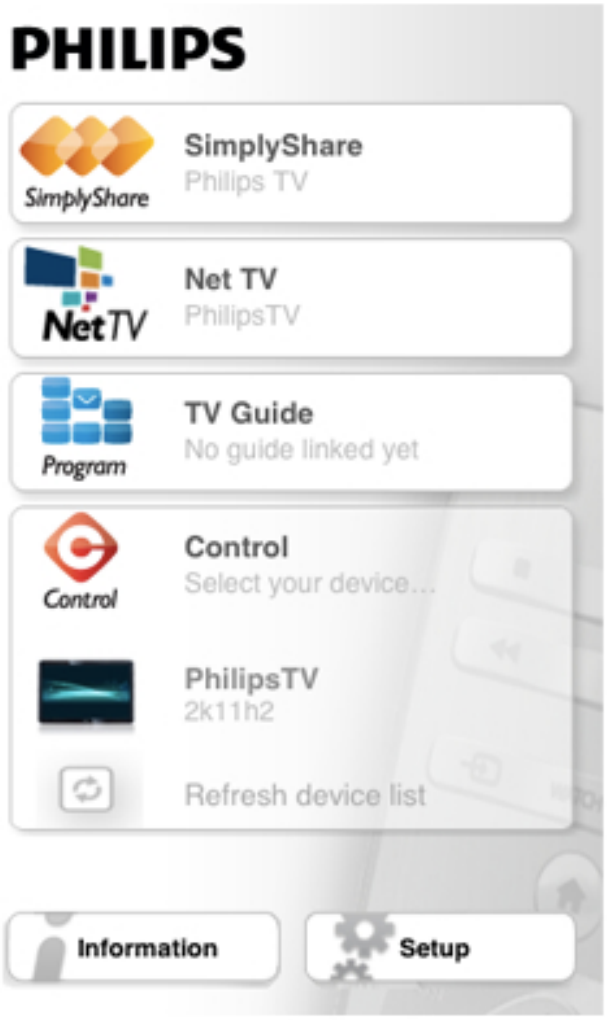


## SimplyShare

With **SimplyShare**, you can send media files (photos, music or videos) from a device in your home network to another.

To open SimplyShare in the MyRemote app, tap the **SimplyShare** button in the home menu.

**Select a device to send media from**
**1 -** Tap the white bar at the top to open the list of available devices.
**2 -** Tap a device in the list.

**Select a device to play the media**
**1 -** Tap the white bar at the bottom to open the list of available devices.
**2 -** Tap a device in the list.

**Select a media file**
You can select the type of media you are looking for - **Music**, **Videos** or **Photos**.
**1 -** Tap the type of media you are looking for.
**2 -** In the list, tap the song, video or photo to play it on the device you selected.

**Compatible media formats**
A wide range of media formats can be played on your TV.

In **Help**, press ☰ **List** and look up **Playback formats** for the list of compatible file formats for TV.

## Net TV

With the Net TV button in the MyRemote home menu, you can open Net TV / Smart TV on your TV.

To open Net TV / Smart TV on your TV, tap the **Net TV** button in the MyRemote home menu.

You can use the remote control of the MyRemote app to browse the pages. With the MyRemote app keyboard, you can easily enter text on TV.

## TV guide

If you have a tablet, you can call up the TV guide of your TV on your tablet. You can consult the TV schedule and read programme info. You can tap the programme title to switch to the TV channel directly.

To open the TV guide, tap the TV guide button on the MyRemote home menu.
The first time you tap the TV guide button, you will be asked to link up the tablet and TV.

**Preparation**
Before you link tablet and TV, check if the TV guide is updated from the Internet.

**1 -** Press ⌂ and select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **General settings** > **TV guide**.
**3 -** Select **From the Internet** and press **OK**.
**4 -** Press ↩, repeatedly if necessary, to close the menu.

**Link up with the TV**
To link up the tablet with the TV guide of the TV . . .
**1 -** Press **GUIDE** on the remote control to open the TV guide on TV.
**2 -** Press the ▬ (yellow) key to open the list of detected mobile devices.
**3 -** Select the device in the list and press **OK** to view the code to link up.
**4 -** On the tablet, start the MyRemote App and tap the **Setup** button on the home menu.
**5 -** Tap the **TV guide** item.
**6 -** Enter the code to link up.

## Control

With the Control button on the MyRemote home menu, you turn your smartphone or tablet into a full remote control for your TV.

Tap the **Control** button to select your TV (or your Philips Blu-ray Disc player or Home Theatre System) to operate.
Tap the device icon to show its remote control.

## Future updates

Keep track of the MyRemote App software updates on the app stores.

A future update will have the **Wi-Fi smart screen** function. With this function, you can bring up digital TV channels on your smartphone or tablet.

6

# Skype

## 6.1 What is Skype?

With **Skype™** you can make video calls on your TV for free. You can call and see your friends from anywhere in the world. Talk to your friends while watching them on the big screen of your TV.

To make a video call on Skype, you need the separately sold **Philips PTA317** TV camera with a built-in microphone and a good connection to the Internet.

The TV needs to be connected to the Internet before you can set up Skype. You can connect your TV either wireless or wired.
In **Help**, press ☰ **List** and look up **Network, wireless** to connect the TV to your home network and the Internet.

**Skype account**
To use Skype, you need to create a Skype account for yourself or for your family. You can create a new account for Skype on your TV or on your computer.

**Skype Credit or Skype Subscriptions**
With Skype, for a little cost, you can also call phones or mobile phones. Using your computer you can buy Skype Credit or take a Skype subscription at www.skype.com

## 6.2 Start Skype

### Install the camera

Connect the TV camera cable to one of the USB connections on the side or on the back of the TV.
Bend the small clamp as shown in the illustration below and position the camera on the top of the TV.

Point the camera to the position you usually sit at. In the Skype settings, you can test the camera, check its viewpoint or set the zoom level.

You can position the camera anywhere you want but it is recommended to put it away from the speakers of the TV.

If the TV camera is not connected, Skype will not start.

### Sign in - New account

With the TV connected to the Internet and the TV camera in place, you can start Skype on your TV.

To open the Skype sign-in page, press ⌂ to open the Home menu, select **Skype** and press **OK**.
Enter your **Skype Name** and **Password**, select **Sign in** and press **OK**. The Skype menu opens on screen.

**Forgotten your Skype name or password?**
Start Skype on your computer to get a temporary password from Skype.

**Create a new account**
If you do not have a Skype Name and Password yet, you can create a new account in the sign-in page on TV.

**1 -** On the sign-in page, select **New account** and press **OK**.

**2 -** Create your new account.
- **Full name**
Enter your full name.
- **Skype name**
Enter a name as your Skype name. Your Skype Name will be shown in the list of contacts of other Skype users. A Skype Name must begin with a letter, upper or lowercase. It must have 6 to 32 characters and can contain numbers. A Skype Name cannot contain a space.
- **Password**
Enter your password. Your password must have 6 to 20 characters and must at least contain one letter or one number. It cannot contain special characters like a trademark, bullet or euro sign. A Skype password cannot contain a space.
- **Email**
Enter your email address.

**3 -** Read and accept the Skype **Terms of Use**.

**4 -** If your new account was accepted, you are signed in.

You can edit or complete your **Skype profile** on your computer. Start Skype on your computer, sign in with your Skype Name and Password and open your Skype profile. You can change your profile picture, add a mood message or set the privacy settings.

## No emergency calls

**No emergency calls** - Skype is not a replacement for your telephone and cannot be used for emergency calling.

6.3

# Contacts

## Contacts page

On the **Contacts** page you can find your list of Skype contacts. The contacts are shown with their Skype Name. On this page, you can add, block or delete contacts. You can view contact details or view the history of calls you had with this contact.

**Contact info**
To view the details of a contact, select a contact and press **INFO**.

**Contact history**
To view the calls you had with a contact, press **Contact history**.
When you sign in with another Skype account on this TV, the history of all contacts of your account is cleared.

**Online status**
To know if a contact is online, check the online status icon next to the Skype Name of your contact. Like all users, your online status is also shown in their contacts page. But also like other users, you can change your online status.
**1 -** On the Contacts page, press **OPTIONS** and select **Online status**.
**2 -** In the list, select a status and press **OK**.
Each time you switch the TV on, your status is switched back to **Online**.

- **Online**
This is your usual setting when you sign into Skype. Your contacts can see that you are online and can contact you.

- **Away**
Your contacts can see that you are signed in but not necessarily watching TV. Your contacts can still try to call you.

- **Do not disturb**
Your contacts can see that you are online but you do not wish to be disturbed. They can call you and you will be alerted with sound.

- **Invisible**
You will appear to be offline to all of your contacts, but you can still use Skype as usual. You can use Skype without being disturbed by incoming calls.

- **Offline**
Automatically shown when you are not signed in to Skype. You can also set your status to offline yourself.

**Phone or mobile numbers**
You can also add a phone number of a landline phone or mobile phone to your list of contacts. Such a contact will be marked with this icon.

## Add a contact

If you know the Skype Name or email of a friend, you can easily add them to your list of contacts. If you do not know their Skype Name or email, you can also try to look for them by name.

**1 -** In the menu bar select the **Contacts** page. You can press **LIST** or to jump to the menu bar.
**2 -** Press **Add contact**.
**3 -** In the text field, enter a Skype name, email address or name. Use the key pad on the remote control to enter the text.
**4 -** Select **Search** and press **OK**.
**5 -** Skype will find users that match your search. To know if you selected the person you are looking for, press **INFO** for the contact details.
**6 -** If this is the person you are looking for, select **Add** and press **OK**.

The newly added contact has to accept your request to add his or her name to your list of contacts. Until the contact accepts your request, the new contact appears offline.

**Accepting a Contact request**
Other Skype users can invite you to be on their contact list. You will be notified of their request, which you can accept or decline.

## Block a contact

You can block any Skype user from finding you online. A blocked contact will be unable to contact you with Skype. A blocked contact will not be notified, you will always appear to be offline in the contact list of the blocked contact.

On the **Contacts** page, select a contact and press **Block contact**.

You can always unblock a contact. To unblock, select the contact in the list and press **Unblock contact**.

In the list of contacts a blocked contact has this icon.

To view a list of blocked contacts, press **OPTIONS** and select **Blocked contacts**.
To unblock someone in the list, select the name and press **OK**.

6.4
# Calling on Skype

## Video and voice call

With Video call you can call and see your friends on your TV screen, for free.

**Make a Video call**
On the **Contacts** page, select the person you want to call and then select the **Video call** button and press **OK**.

If your contact has a camera connected and accepts the call, you can see the person on your TV, full screen. When your TV camera is switched on, the blue indicator LED lights up. You can check what your contact can see, in the small screen on your TV.

To mute your microphone while you are making the call, press **Mute**.
To switch off your camera, press **Camera off**.
To zoom and frame the camera, press **Zoom**. Now, you can press **Zoom out** or press **Zoom in**. You can use the arrows to frame the camera. When the zoom and framing is fine for you, press **Set zoom**.

To end a call, select the **End call** button and press **OK**.

**Make a Voice call**
You can make a Skype call without video, with the camera switched off.
To make a call without video, select the contact, then select the **Voice call** button and press **OK**.
To mute your microphone while you are calling, press **Mute**.
To end the voice call, select the **End call** button and press **OK**.

On a voice call, you can still switch to a Video call. To switch to Video call, press **Camera on**.

A contact can add you to a voice call with more than one participant. You cannot add an extra participant yourself.

**Camera and microphone**
The volume of the microphone is set to its ideal setting automatically.
You can test your camera with built-in microphone to see if it is working.
Press **LIST** to jump to the menu bar, select **Settings** in the menu bar and select **Test camera and microphone**.

## Calling phones and mobiles

With Skype you can also call landline phones and mobile phones. To call phones you need to buy Skype Credit on Skype on your computer. You can buy Skype Credit or subscribe to a Skype subscription.

**Call a phone**
**1 -** Select **Call phones** in the menu bar. You can press **LIST** to jump to the menu bar.
**2 -** Enter the telephone number with the remote control keys or select the numbers on the dial pad on screen.
To enter a + (plus), press **+**.
To enter a * (asterisk), press *.
To enter a # (hash), press #.
To delete one digit, press **Backspace**.

**3 -** When you entered the complete number, select the **Call** button and press **OK** to start calling.
To mute your microphone while you are calling, press **Mute**.

To end a phone call, select the **End call** button and press **OK**.

**List of recently called phones**
If you have called some phones with Skype earlier, you can select a phone number in the list at the left of the page.
To clear the selected phone number, press **Clear number**.
To add this phone number to your list of contacts, press **Add to contacts**.
To clear all phone numbers, press **Clear all**.

**No emergency calls** - Skype is not a replacement for your telephone and cannot be used for emergency calling.

## Receiving a call

When you are signed in to Skype and watching TV, you are notified of an incoming call with a message on screen. The notification says who is calling and you can accept or decline the call.
To accept the call, select the **Answer** button in the notification and press **OK**.
To decline, select the **Decline** button and press **OK**.

Also, new contact requests will be shown immediately.

**Skype during rental movies and Pause TV**
While you are watching a rental movie from a broadcaster or video store, or using Pause TV, accepting a Skype call will interrupt the movie or paused programme.
To resume watching the rental movie, you need to go back to the video store or broadcast service. Some video stores and services do not allow you to restart the movie. The Pause TV programme storage is lost.

**Skype during recording**
While recording a programme on a connected USB Hard Drive, the TV will notify you if there was an incoming call and from who it was. The TV prevents accepting a Skype call during recording. You can easily answer the call from the **Recent** page, after the recording is done.

**Contact notifications**
Next to normal calls, you can be notified when your contacts come online or go offline. You can switch off these contact notifications on the **Settings** page.

## Recent calls

On the **Recent** page, you can view your recent Skype events.
The most recent Skype event is shown first. It shows which contact, the type of event - video call or Phone call and when it occurred.

As on the Contacts page, you can make a Video call, Voice call or Phone call to a selected contact.

**History**
For how long your Skype events are kept in this history list depends on the amount of contacts you have and how intensively you use Skype.
Also, if you sign in with another Skype account on this TV, the recent history will be cleared.

## Voicemail

If someone calls you on Skype and you cannot take the call, he or she can leave a spoken message on your Skype voicemail.

To leave a message on a contacts voicemail, you need to set up Skype voicemail on your computer.
If you did not setup voicemail for yourself but the contact who called has setup voicemail, he or she can leave a voicemail for you.

On the **Voicemail** page, you can play voicemail messages that were left for you. If a number is shown next to the voicemail icon in the menu bar, you have a new voicemail message - **1**.

**Play a voicemail**

To play a voicemail, select the voicemail icon in the menu bar, select the new voicemail in the list and press **OK**. You can listen to the new voicemail as many times you want. However, when you leave the **Voicemail** page, all played voicemails are removed from the list.

As on the Contacts page, you can make a Video call, Voice call or Phone call to a selected contact.

6.5
# Skype Credit

On Skype, you can buy **Skype Credit** or take a **Skype subscription**. With Skype Credit or a Skype subscription available, you can call landline phones and mobile phones with your TV.

**Buy Skype Credit**
To buy Skype Credit or take a Skype subscription, sign in to Skype on your computer.
The Skype Credit you buy will be available when you sign in to Skype on your TV.

The amount of credit or the subscription information is shown on each page where you can make a phone call.

**Skype Credit low**
You will be notified if your credit is too low to make a phone call.

6.6
# Skype settings

## Automatic sign-in

You can set Skype to automatically sign in when you switch on the TV. You do not need to enter your Skype Name or password.

Navigate to the menu bar and select **Settings** to open the Settings page.
Select **Automatic sign-in** and press **OK** to check or uncheck.

## Contact notifications

You can receive or block the online status notifications of your contacts while you watch TV.

Navigate to the menu bar and select **Settings** to open the Settings page.
Select **Contact notifications** and press **OK** to check or uncheck.

## Online status

You can change your own online status.

Navigate to the menu bar and select ⚙ **Settings** to open the Settings page.
Select **Online status** and then select the online status you want your contacts to see when you are online and press **OK**.

## Ringtone volume

You can adjust the Skype ringtone volume.

Navigate to the menu bar and select ⚙ **Settings** to open the Settings page.
Select **Ringtone volume** and then adjust the volume with the arrows up and down.

## Test camera and microphone

You can test if your Skype camera and microphone work. Also you can zoom and frame the picture of your camera to exactly what you want your contacts to see.

Navigate to the menu bar and select ⚙ **Settings** to open the Settings page.
Select **Test camera and microphone**. The picture of the camera should appear and when you talk, the microphone volume should indicate your voice.

**Zoom and frame the picture**
**1 -** Press **Zoom out** or **Zoom in**.
**2 -** With the picture zoomed in, you can shift the camera frame up, down, left or right to exactly frame the picture. Use the arrows on the remote control to shift.
**3 -** Press **Set zoom** when done.

The volume of the microphone is adjusted automatically.

## Change password

You can change your current Skype password and enter a new password.

**1 -** Navigate to the menu bar and select ⚙ **Settings** to open the Settings page.
**2 -** Select **Change password**.
**3 -** Select the **Current password** text field to enter your password.
**4 -** Select the **New password** text field and enter a new password.
**5 -** Select the **Repeat new password** text field and enter the new password again.
**6 -** Press **OK** to send the new password for confirmation.

6.7
# Sign out

Navigate to the menu bar and select ⚙ **Settings** to open the Settings page.

Select **Sign out** to quit Skype on your TV.

6.8
# Terms of Use

Read the Terms of Use of Skype at **www.skype.com/go/tou**

Also read the Privacy Statement at **www.skype.com/privacy**

7

# Games

7.1

## Play a game

With a game console connected to the TV, you can play games on TV.

### Start a game

Switch on the game console and press ⌂, select the icon you have set for your game console (e.g. Game or Player) and press **OK** to view the game.

### Ideal game setting

For some games, where speed and precision is needed, set the TV to the ideal **Game** setting before you start playing.
If your game console is added as a **Game** type of device in the Source menu (list of connections), the TV is set to the ideal **Game** setting automatically.
If the type of your game console is set as **Player** and used as a disc player most of the time, leave the device type set to **Player**.

To set the TV to the ideal setting manually . . .
**1 -** Press ⌂, select ⚙ **Setup** and press **OK**.
**2 -** Select **TV settings** > **Picture** > **Game or computer** and press **OK**.
**3 -** Select **Game** and press **OK**.
**4 -** Press ↩, repeatedly if necessary, to close the menu.
Remember to set the Game or computer setting back to **Off** when you stop playing the game.

In **Help**, press ☰ **List** and look up **Game console, connect** to connect a game console to the TV.

7.2

## Two-player games

If you play a multi-player game with split screens, you can set the TV to show each screen as a full screen. Each player sees only his part of the game, full screen. The TV uses 3D technology to show both screens.
To view the two different full screen pictures, you need a pair of 3D glasses for each player.

### What you need

To play a two-player game with this TV, you need a two-player kit with 2 passive 3D glasses - Philips PTA436 (sold separately).
Also, the game console must be connected with HDMI.

### Start a two-player game

**1 -** Press ⇥ **Source**, select the game console and press **OK**.
**2 -** On the game console, start the game and select the multi or two-player mode. Select the mode for split screen viewing.
**3 -** On the TV, press ⫶ **OPTIONS**, select **Picture and sound**, select **Two-player game** and press **OK***.
**4 -** Select the format in which the split screen game is shown on screen, **Side by side** or **Top / bottom** and press **OK**. The TV shows the 2 screens as full screens.
To watch the 2 different screens, each player puts on one of the glasses - player 1 or player 2.

### In and out of split screen view

In two-player split screen view, you can switch back and forth from split screen to combined view, to be able to read the game menu or game scores.
To switch views back and forth, press **OK** on the remote control of the TV.

### Stop Two-player game

To stop the two-player split screen view, press ⌂ and select another activity.

* If Two-player gaming is unavailable in the menu, press **3D** on the remote control and select **2D** and press **OK**.

8

# TV Specifications

8.1

## Environmental

### Saving energy

Energy saving bundles the TV settings that help the environment.

While you are watching TV channels, press to open **Eco settings**. Active settings are marked with a .
Press again to close.

**Energy saving**
This Smart picture setting sets the picture, together with Ambilight, in the most ideal energy conscious setting. To switch on, select **Energy saving** in Eco settings and press **OK**. To switch off Energy saving, select another Smart picture setting.

**Screen off**
If you only listen to music, you can switch off the TV screen to save energy. Select **Screen off** and press **OK**. To switch the screen back on, press any key on the remote control.

**Light sensor**
To save energy, the built-in ambient light sensor lowers the brightness of the TV screen when the surrounding light darkens. The built-in light sensor automatically adjusts the picture, together with Ambilight, to the lighting conditions of the room. To switch on, select **Light sensor** and press **OK**. To switch off, press **OK** again.

**Switch off timer**
If you do not press a key on the remote control during a 4 hour period, or if the TV receives no signal for 10 minutes, the TV switches off automatically to save energy. Select **Switch off timer**.
If you use the TV as a monitor or use a digital receiver to watch TV (a Set-top box - STB) and you do not use the remote control of the TV, deactivate the automatic switch off.

In addition to these eco settings, your TV also has environmentally friendly adjustments with regard to power consumption.

**Low standby power**
The class-leading and highly advanced power circuitry brings down the power consumption of the TV to an extremely low level, without losing out on the constant Standby functionality.

**Power management**
The advanced power management of this TV ensures the most efficient use of energy. You can check how your personal TV settings, the level of brightness in current onscreen pictures, and the surrounding light conditions determine the relative power consumption.

To check the relative power consumption, press > **Setup** > **Watch demos** > **Active control** and press **OK**. Select a setting to check the corresponding values.

### European energy label

The **European Energy Label** informs you on the energy efficiency class of this product. The greener the energy efficiency class of this product is, the lower the energy it consumes.
On the label, you can find the energy efficiency class, the average power consumption of this product in use and the average energy consumption for 1 year. You can also find the power consumption values for this product on the Philips website for your country at **www.philips.com/TV**

### Eco-label

Philips continuously focuses on lowering the environmental impact of its innovative consumer products. We aim our efforts towards environmental improvements during manufacturing, reduction of harmful substances, energy-efficient use, end-of-life instructions and product recycling.

Thanks to our environmental effort, this TV has been awarded the **European Ecolabel** – the flower – (www.ecolabel.eu).
You can find detailed information on standby energy consumption, warranty policy, spare parts and recycling of this TV on the Philips website for your country at www.philips.com

### End of use

**Disposal of your old product and batteries**
Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC.

Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please find out for yourself about the local rules on separate collection of batteries because correct disposal will help to prevent negative consequences for the environment and human health.

8.2

# Power

Product specifications are subject to change without notice. For more specification details of this product, see **www.philips.com/support**

**Power**

- Mains power : AC 220-240 V~, 50-60 Hz
- Ambient temperature : 5°C to 35°C
- Standby power consumption : < 0.1W
- For power consumption, see the product specifications at www.philips.com/support.

The power rating stated on the product typeplate is the power consumption for this product during normal household use (IEC 62087 Ed.2). The maximum power rating, stated between brackets, is used for electrical safety (IEC 60065 Ed. 7.2).

8.3

# Reception

- Aerial input : 75 ohm coaxial (IEC75)
- Tuner bands : Hyperband, S-Channel, UHF, VHF
- DVB : DVB-T (terrestrial, antenna) COFDM 2K/8K; DVB-T2-OFDM, supporting FFT 16kext,32kext : only for TV types '. . . T/12'; DVB-C (cable) QAM
- Analogue video playback : NTSC, SECAM, PAL
- Digital video playback : MPEG2 SD/HD (ISO/IEC 13818-2), MPEG4 SD/HD (ISO/IEC 14496-10)
- Digital audio playback (ISO/IEC 13818-3)

8.4

# Display

## Type

- Display type : LED Full HD
- Diagonal screen size :

- 42PDL6907 : 107 cm / 42 inch
- 47PDL6907 : 119 cm / 47 inch
- Panel resolution : 1920x1080p
- 3D : Easy 3D, Two-player Full Screen gaming, 3D Depth adjustment, 2D to 3D conversion
- Aspect ration : 16:9
- Brightness : 400 cd/m2
- Peak Luminance ration : 65%
- Dynamic screen contrast : 500.000 : 1
- Picture enhancement : Pixel Precise HD, 400Hz Perfect Motion Rate, Micro Dimming

## Display resolutions

**Computer formats - HDMI**

Resolution — Refresh rate

- 640 x 480 - 60Hz
- 800 x 600 - 60Hz
- 1024 x 768 - 60Hz
- 1680 x 1050 - 60Hz
- 1440 x 900 - 60Hz
- 1600 x 1200 - 60Hz
- 1400 x 1050 - 60Hz
- 1280 x 800 - 60Hz
- 1280 x 1024 - 60Hz
- 1280 x 960 - 60Hz
- 1920 x 1080 - 60Hz

**Computer formats - VGA**

Resolution — Refresh rate

- 640 x 480 - 60Hz
- 800 x 600 - 60Hz
- 1024 x 768 - 60Hz
- 1680 x 1050 - 60Hz
- 1440 x 900 - 60Hz
- 1600 x 1200 - 60Hz
- 1400 x 1050 - 60Hz
- 1280 x 800 - 60Hz
- 1280 x 1024 - 60Hz
- 1280 x 960 - 60Hz
- 1920 x 1080 - 60Hz

**Video formats**

Resolution — Refresh rate

- 480i - 60 Hz
- 480p - 60 Hz
- 576i - 50 Hz
- 576p - 50 Hz
- 720p - 50Hz, 60 Hz
- 1080i - 50Hz, 60 Hz
- 1080p - 24Hz, 25Hz, 30Hz, 50Hz, 60 Hz

8.5

# Sound

- Output power (RMS) : 20W (2x10W) @10%THD
- Sound enhancement : Auto Volume Leveller, Clear Sound, Incredible Surround, Incredible Surround 3D

8.6
# Multimedia

**Connections**
• USB 2.0
• Ethernet LAN RJ-45
• Wi-Fi 802.11b/g/n (built-in)

**Supported USB file systems**
• FAT 16, FAT 32, NTFS

**Playback formats**
• Containers : 3GP, AVCHD, AVI, DivX®, MPEG-PS, MPEG-TS, MPEG-4, Matroska (MKV), Quicktime (MOV), Windows Media (ASF/WMV/WMA)
• Video Codecs : DivX®, MPEG-1, MPEG-2, MPEG-4 Part 2, MPEG-4 Part 10 AVC (H264), VC-1, WMV9
• Audio Codecs : AAC, HE-AAC (v1/v2), AMR-NB, Dolby Digital, Dolby Digital Plus, MPEG-1/2/2.5 Layer I/II/III (includes MP3), WMA (v2 to v9.2), WMA Pro (v9/v10)
• Subtitles :
– Formats : SAMI, SubRip (SRT), SubViewer, DivX® subtitles
– Character encodings : UTF-8, Central Europe and Eastern Europe (Windows-1250), Cyrillic (Windows-1251), Greek (Windows-1253), Western Europe (Windows-1252)
• Image Codecs : JPEG
• Limitations :
– Maximum supported total bit rate for a media file is 30Mbps.
– Maximum supported video bit rate for a media file is 20Mbps.
– MPEG-4 AVC (H.264) is supported up to High Profile @ L4.1.
– VC-1 is supported up to Advanced Profile @ L3.

**DivX®**
In **Help**, press ☰ **List** and look up **DivX® VOD** for more information.

**Supported DLNA media server software (DMS)**
• Windows Media Player 11 (for Microsoft Windows XP, Vista or Windows 7)
• TVersity 1.9.3 (pro) (for Windows XP)
• Twonky Media — PacketVideo 4.4.9 (for PC and Intel MacOX)
• Nero 9 — Nero MediaHome (for Microsoft Windows XP)
• Sony Vaio Media Server (for Microsoft Windows XP or Vista)
• Sony PS3 media server (for Windows XP)
• Google Media Server (Google desktop) (for Windows XP)
• DiXiM (for Windows XP)
• Macrovision Network Media Server (for Windows XP)
• Philips NAS SPD8020 (v. 1.2.9.47)
• Fuppes (for Linux)
• uShare (for Linux)

**Supported DLNA mobile devices (DMS/DMC)**
• Nokia N78, N80, N81, N82, N92, N93, N93i, N95, N96, N800, N810
• Samsung SGH-i780

**ESD regulations**
This apparatus meets performance criteria A for ESD. In case the apparatus does not recover in DLNA mode due to electrostatic discharge, user interference is required.

8.7
# Connectivity

**TV Rear**
• SCART (adapter included): Audio L/R, CVBS in, RGB
• YPbPr : Y Pb Pr (adapter included), Audio L/R
• VGA (D-sub 15), Audio In (stereo mini-jack 3.5mm
• Audio In (DVI to HDMI / VGA) (stereo mini-jack 3.5mm)
• 3x HDMI in with ARC (3D)
• USB
• Network LAN — (RJ45)

**TV Side**
• 2x HDMI Side in with ARC (3D)
• 2x USB
• Audio Out L/R — display synchronised (optical)
• Common interface slot (CI+/CAM)
• Headphones (stereo mini-jack 3.5mm)

8.8
# Dimensions and weights

**42PDL6907**
Width 989 mm
Height 636 mm
Depth 35.3 mm
Weight ±19.9 kg
. . . with TV stand
Height 636 mm
Depth 266 mm
Weight ±28.2 kg

**47PDL6907**
Width 1099 mm
Height 697.5 mm
Depth 35.3 mm
Weight ± 23.7 kg
. . . with TV stand
Height 697.5 mm
Depth 266.1 mm
Weight ± 35.1 kg

UMv 3139 137 05721

9

# TV Software

9.1

## Software version

To view the current TV software version, press ⌂, select ⚙ **Setup** and press **OK**.
Select **Software settings** and press **OK**.
Select **Current software info** and see **Version: . . . .**

9.2

## Software update

### Software update from Internet

If the TV is connected to the Internet, you may receive a message from TP Vision to update the TV software. You need a high-speed (broadband) Internet connection.

If you receive this message, we recommend you carry out the update. Select **Update**. Follow the instructions on screen.

You can also look for new updates yourself.
To look for an update, press ⌂, select ⚙**Setup** and press **OK**.
Select **Update software** and press **OK**. Follow the instructions on screen.

When the update is complete, the TV switches off and back on again automatically. Wait for the TV to switch itself back on. Do not use the Power switch ⏻ on the TV.

### Software update from USB

It might be necessary to update the TV software. You need a computer with an high-speed Internet connection and a USB memory device to upload the software on the TV. Use a USB memory device with 256MB free space. Make sure that write protection is switched off.

**1 - Start the update on TV**
To start the software update, press ⌂, select ⚙**Setup** and press **OK**.
Select **Update software** > **USB** and press **OK**.

**2 - Identify the TV**
Insert the USB memory into the side of the TV, select **Start** and press **OK**. An identification file is written on the USB memory device.

**3 - Download the TV software**
Insert the USB memory into your computer. On the USB memory device, locate the file **update.htm** and double click it. Click on **Send ID**. If new software is available, download the .zip file. After the download, unzip the file and copy the file **autorun.upg** onto the USB memory device. Do not place this file in a folder.

**4 - Update the TV software**
Insert the USB memory into the TV again. The update starts automatically. The TV switches itself off for 10 seconds and then back on again. Please wait.
**Do not . . .**
• use the remote control
• remove the USB memory device from the TV

If a power cut occurs during the update, never remove the USB memory device from the TV. When the power returns, the update will continue.

At the end of the update, the message **Operation successful** appears on screen. Remove the USB memory device and press ⏻ on the remote control.

**Do not . . .**
• press ⏻ twice
• use the ⏻ switch on the TV
The TV switches itself off (for 10 seconds) and then back on again. Please wait.

The TV software has been updated. You can use the TV again.

To prevent an accidental update of the TV software, delete the autorun.upg file from the USB memory device.

9.3

## Open source software

This television contains open source software. TP Vision Netherlands B.V. hereby offers to deliver, upon request, a copy of the complete corresponding source code for the copyrighted open source software packages used in this product for which such offer is requested by the respective licences.

This offer is valid up to three years after product purchase to anyone in receipt of this information. To obtain the source code, please contact **open.source@philips.com**
If you prefer not to use email or if you do not receive a confirmation receipt within a week after mailing to this email address, please write in English to . . .

**Open Source Team**
TP Vision Netherlands B.V.
High Tech Campus 5
5656 AE Eindhoven
The Netherlands

9.4

## Open source license

10

# Support

## 10.1 Register

Register your TV and enjoy a range of benefits including full support (including downloads), privileged access to information about new products, exclusive offers and discounts, the chance to win prizes and even participate in special surveys about new releases.

Go to **www.philips.com/welcome**

## 10.2 Using help and search

This TV offers help on screen.
You can find the information you are looking for in the list of topics or read the Help as a book with chapters.

**Open Help**
Press ⌂ to open the Home menu.
Select ? **Help** and press **OK**.

To view an alphabetical list of topics, select the ☰ **List** tab in the menu bar.
To read the Help as a book, select 🕮 **Book** in the menu bar.

Before you execute the Help instructions, close Help.
To close Help, press ↩ or ⌂.

On most settings and options in menus, you can press ▬ (blue key) to read some information on the selected setting or option.
If information on the setting or option is available, you can press ▬ (blue key) again to open the relevant page in Help.

For some activities, like Text, the colour keys have specific functions and cannot open Help.

**TV Help on your tablet, smartphone or computer**
You can download the TV Help in PDF format to read on your smartphone, tablet or computer.
To carry out extended sequences of instructions more easily, you can print out the relevant Help page from your computer.
To download the Help (user manual) go to www.philips.com/support

## 10.3 Online support

To solve any Philips TV related problem, you can consult our online support. You can select your language and enter your product model number.

Go **to www.philips.com/support** .

On the support site you can find your country's telephone number to contact us as well as answers to frequently asked questions (FAQs).
You can download new TV software or the manual to read on your computer. You can email a specific question or, in some countries, chat online to one of our collaborators.

## 10.4 Consumer Care

For support, you can call the Consumer Care hotline in your country. Find the telephone number in the printed documentation that came with the TV.
Or consult our website **www.philips.com/support** .

**TV model number and serial number**
You might be asked to provide the TV product model number and serial number. Find these numbers on the packaging label or on the type label on the back or bottom of the TV.

# Index


3
3D depth 34
3D glasses, type 34
3D glasses, use 34
3D, 2D to 3D 34
3D, cleaning glasses 35
3D, experience 34
3D, health warning 35
3D, optimal viewing 34

A
Ambilight colour 32
Ambilight, dynamic 31
Ambilight, mode 31
Ambilight, placement 31
Ambilight, setup 31
Ambilight, switch on or off 31
Ambilight, TV switch off 32
Antenna connection 6
Antenna connection, tips 8
App, feedback 37
App, gallery 37
App, lock 37
App, recommended 37
App, search 37
Audio commentary 32
Audio effects 33
Audio language 28
Audio Out - Optical 9
Audio to video sync 12
Auto subtitle shift 10
Automatic channel update 22

B
Balance 30
Black bars 24

C
Channel list copy 23
Channel list copy, copy 23
Channel list copy, upload 23
Channel list, New 22
Channel lists 21
Channel lock 22
Channel, favourite 21
Channel, rename 21
Channel, reorder 21
Channel, switch 20
Channel, update 22
Channels, reinstall 23
Child lock code 22
Clock 29
Connections, list 27
Connectivity guide 8

D
Device icon 27
Digital Text 25
DivX® VOD 40
DLNA 6
DMR - Digital Media Renderer 8
DVB 23
DVI, connect 9

E
EasyLink 9
EasyLink, connections 8
EasyLink, settings 10
Eco settings 51
End of use 51
ESD 53
European Ecolabel 51
European Energy Label 51

F
Factory settings 23

G
Game console, connect 13
Game or computer, computer 16
Game or computer, game 50
Game, play 50
Game, two-player 50
Gamma 29

H
HbbTV 25
HDCP, copy protection 9
HDMI connection, tips 8
Headphone volume 30
Hearing impaired 32
Help, on a tablet 55
Help, usage 55
Home menu 36
Home Theatre System, multichannel 12
Home Theatre System, volume levelling 12

I
Infrared sensor 19
Interactive TV 25
Internet App 37
Internet memory, clear 8

K
Key beep 33
Keyboard, connect 14

L
Language, menus 28
Light sensor 51
Lounge light 32

M
Manual installation 24
Media server software 53
Mixed volume 33
Mono / Stereo 30
Mouse, connect 14
Music files, playback 39
MyRemote App, about 42

N
Network router 6
Network, DHCP 7
Network, password 7
Network, settings 8
Network, Static IP 7
Network, wired 8

Network, wireless 6

O
On and off 18
Online support 55
Online TV 38
Open source software 54
Options,on a channel 20
Original language 28

P
Parental rating 22
Pause TV 40
Perfect Pixel HD Engine 29
Photo camera, connect 15
Photos, slideshow 39
Picture settings 29
Picture style 29
Pixel Plus link 10
Playback formats 53
Power consumption 51
Power inlet 6
Preferred audio format 30
Programme list 26

Q
Quick start 18

R
Radio channel 20
Reception quality 24
Recording 41
Recordings, home menu 41
Reinstall TV 23
Reminder, programme 26
Remote control, batteries 19
Remote control, Keys 19
Rental movies 38

S
Safety instructions 16
Saving energy 51
SCART connection, tips 9
Screen care 17
Screen edges 29
Screen off, switch 39
Setup menu 16
Shop location 30
Skype 45
Skype, automatic sign-in 48
Skype, block contact 47
Skype, calling phones 47
Skype, camera test 49
Skype, change password 49
Skype, contacts 46
Skype, Credit 48
Skype, event 48
Skype, history 48
Skype, mute 47
Skype, new account 45
Skype, notifications 48
Skype, online status 46
Skype, receive calls 47
Skype, ringtone 49
Skype, sign in 45
Skype, sign out 49
Skype, video call 47
Skype, voice call 47
Skype, voicemail 48
Sleep timer 28
Smart TV, PIN code 36
Smart TV, register 36
Smart TV, start page 36
Software, current version 54
Software, Internet update 54
Software, USB update 54
Sound settings 30
Sound style 30
Source menu 27
Speakers / Headphones 33
Speech 33
Standby 18
Standby delay 18
Status 21
Streaming video 38
Subtitles 27
Switch off timer 51
Synchronize audio and video 12

T
Television on Demand 38
Text 24
Text, dual screen 25
Text, freeze 25
Text, options 25
Text, setup 25
Text, T.O.P. overview 25
TV clock 29
TV guide 26
TV guide, information 26
TV placement 31

U
Universal access 32
USB flash drive, connect 14
USB Hard Drive, info 13
USB Hard Drive, installation 13
USB keyboard 14
USB mouse 14

V
VGA connection, tips 9
Video files, playback 39
Video store 38

W
Wall colour 32
Watch TV 20
WPS - Wi-Fi Protected Setup 7
WPS, PIN code 7
WWW. 37

Y
YPbPr connection, tips 9

Specifications are subject to change without notice
© 2012 TP Vision Netherlands B.V.
All rights reserved.